 
 
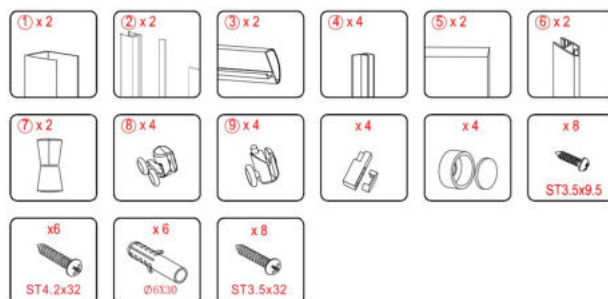 
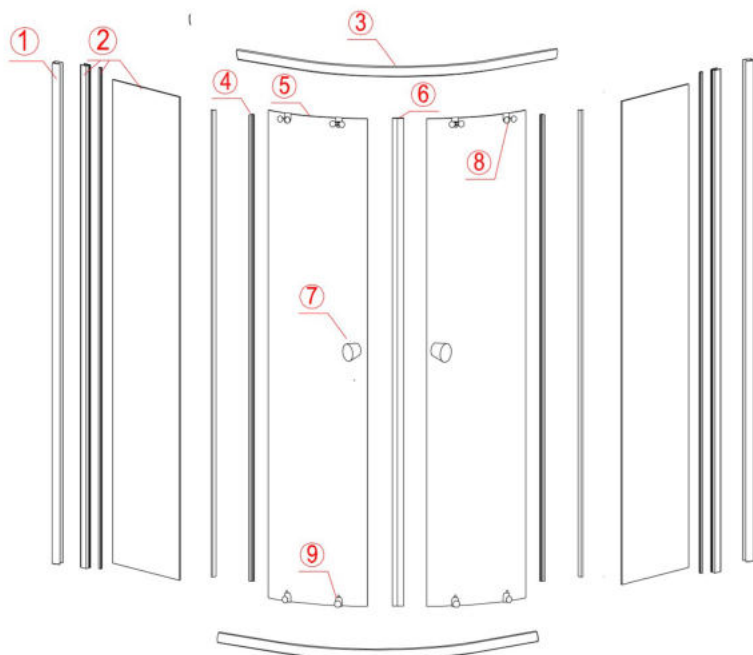 


HLS800/900

 
 
 
INSTALAČNÍ NÁVOD / INSTALLATION INSTRUCTION

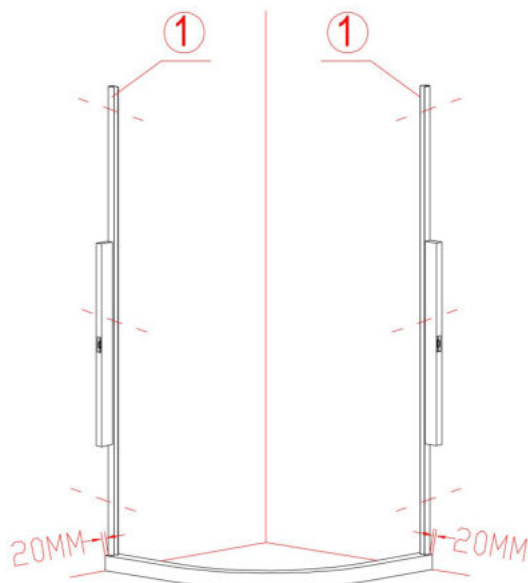



1

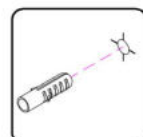



2

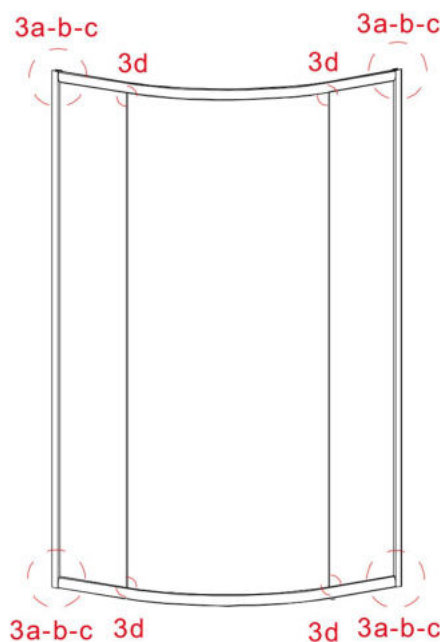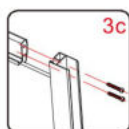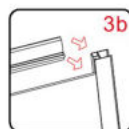




3

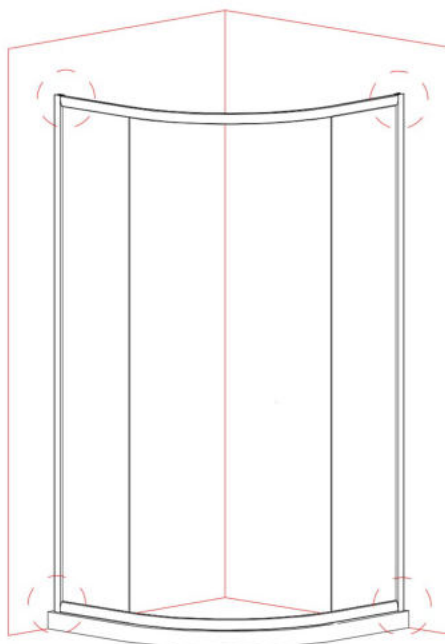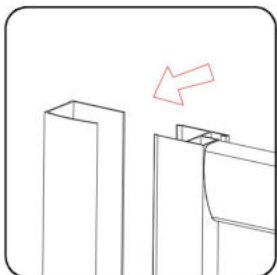  







4

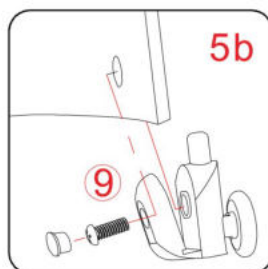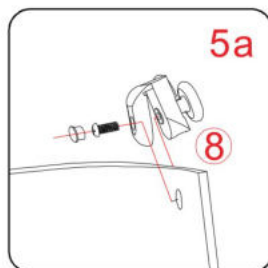  




5

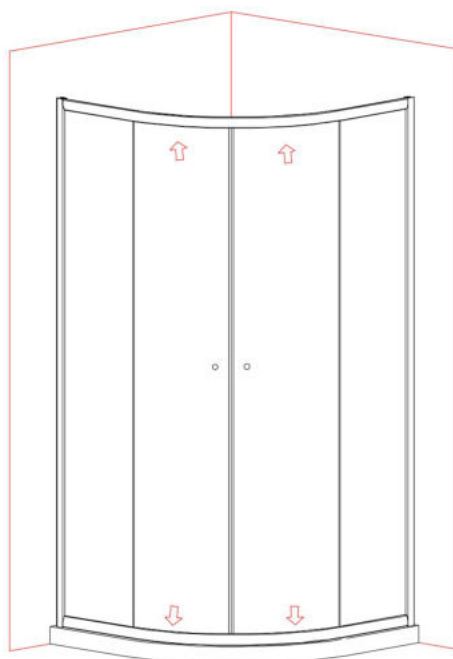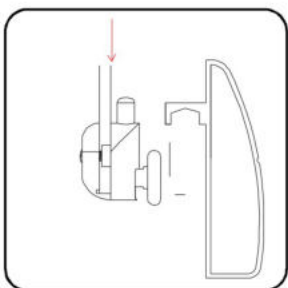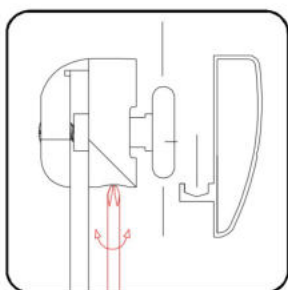   

6

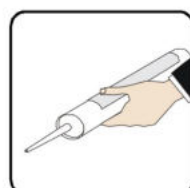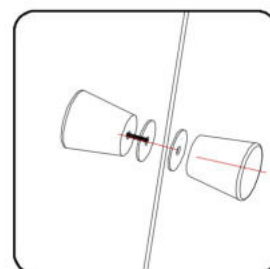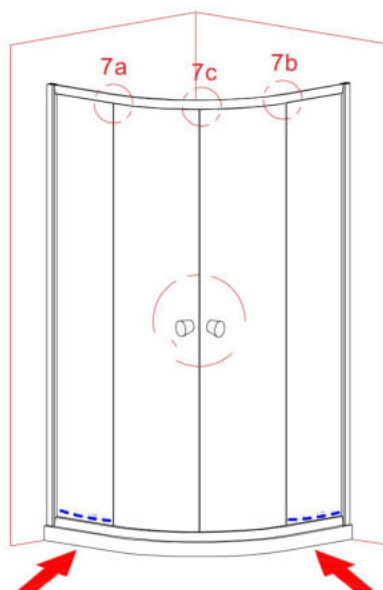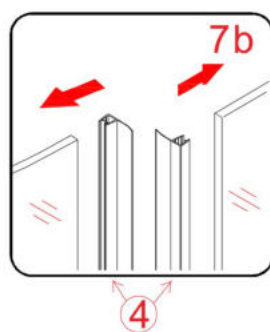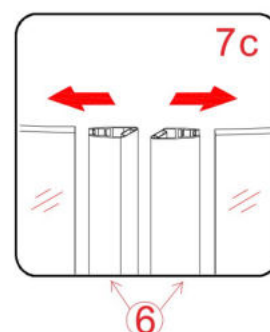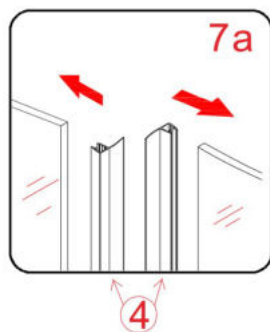      

7

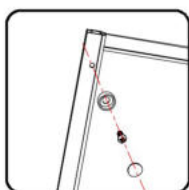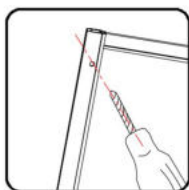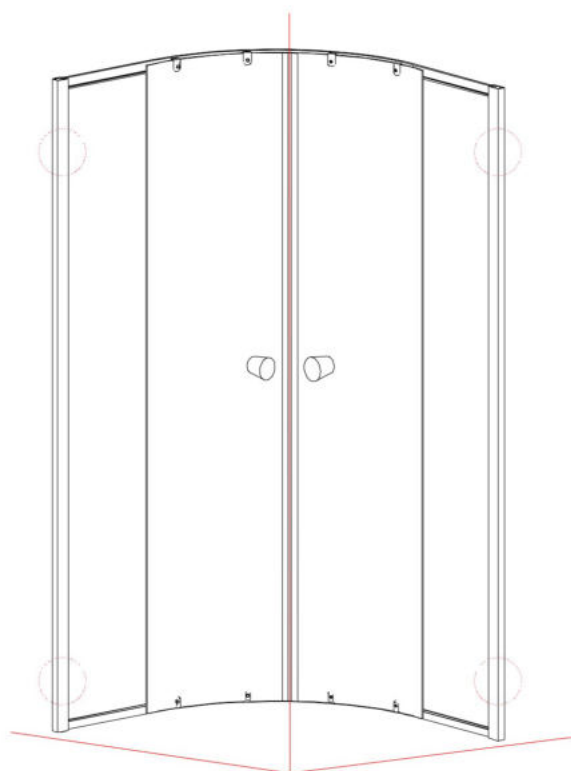   

Ø 2.8mm

x 4






ST3.5x9.5


x 4



   8

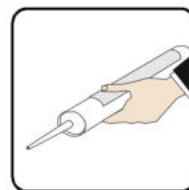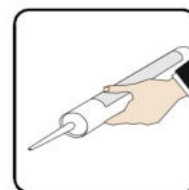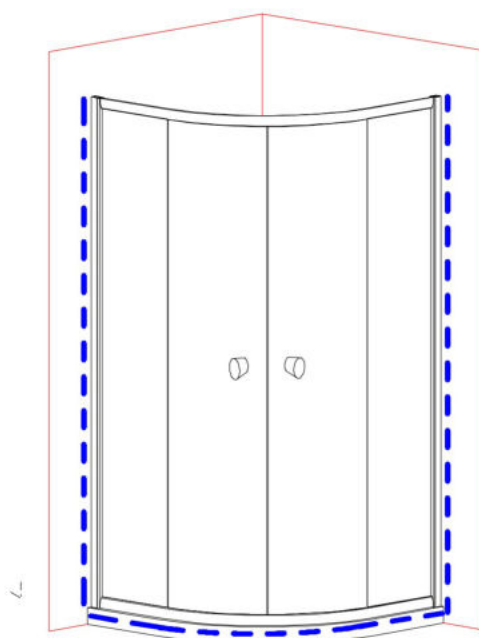

24 hodin

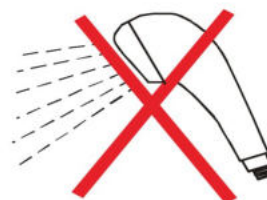 

9