 






Danfoss

INSTRUCTIONS RLV-S




013R9266

013R9266

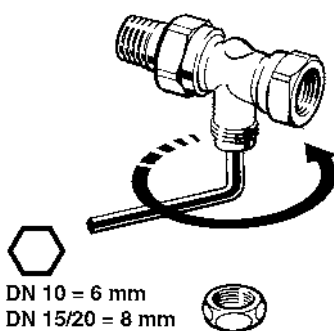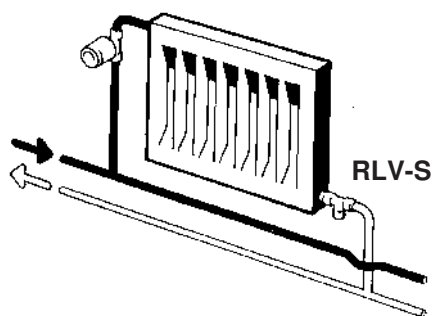

1)

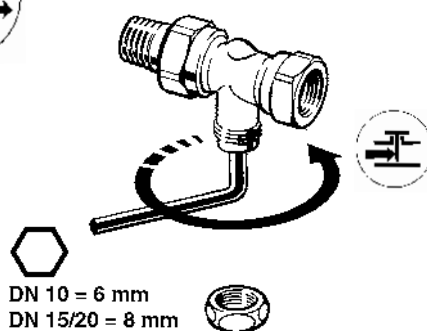

2)

