


ELECTRIC TOOL PARTS LIST

CORDLESS RECIPROCATING SAW
Model CR 18DBL

2017・4・20
(E1)

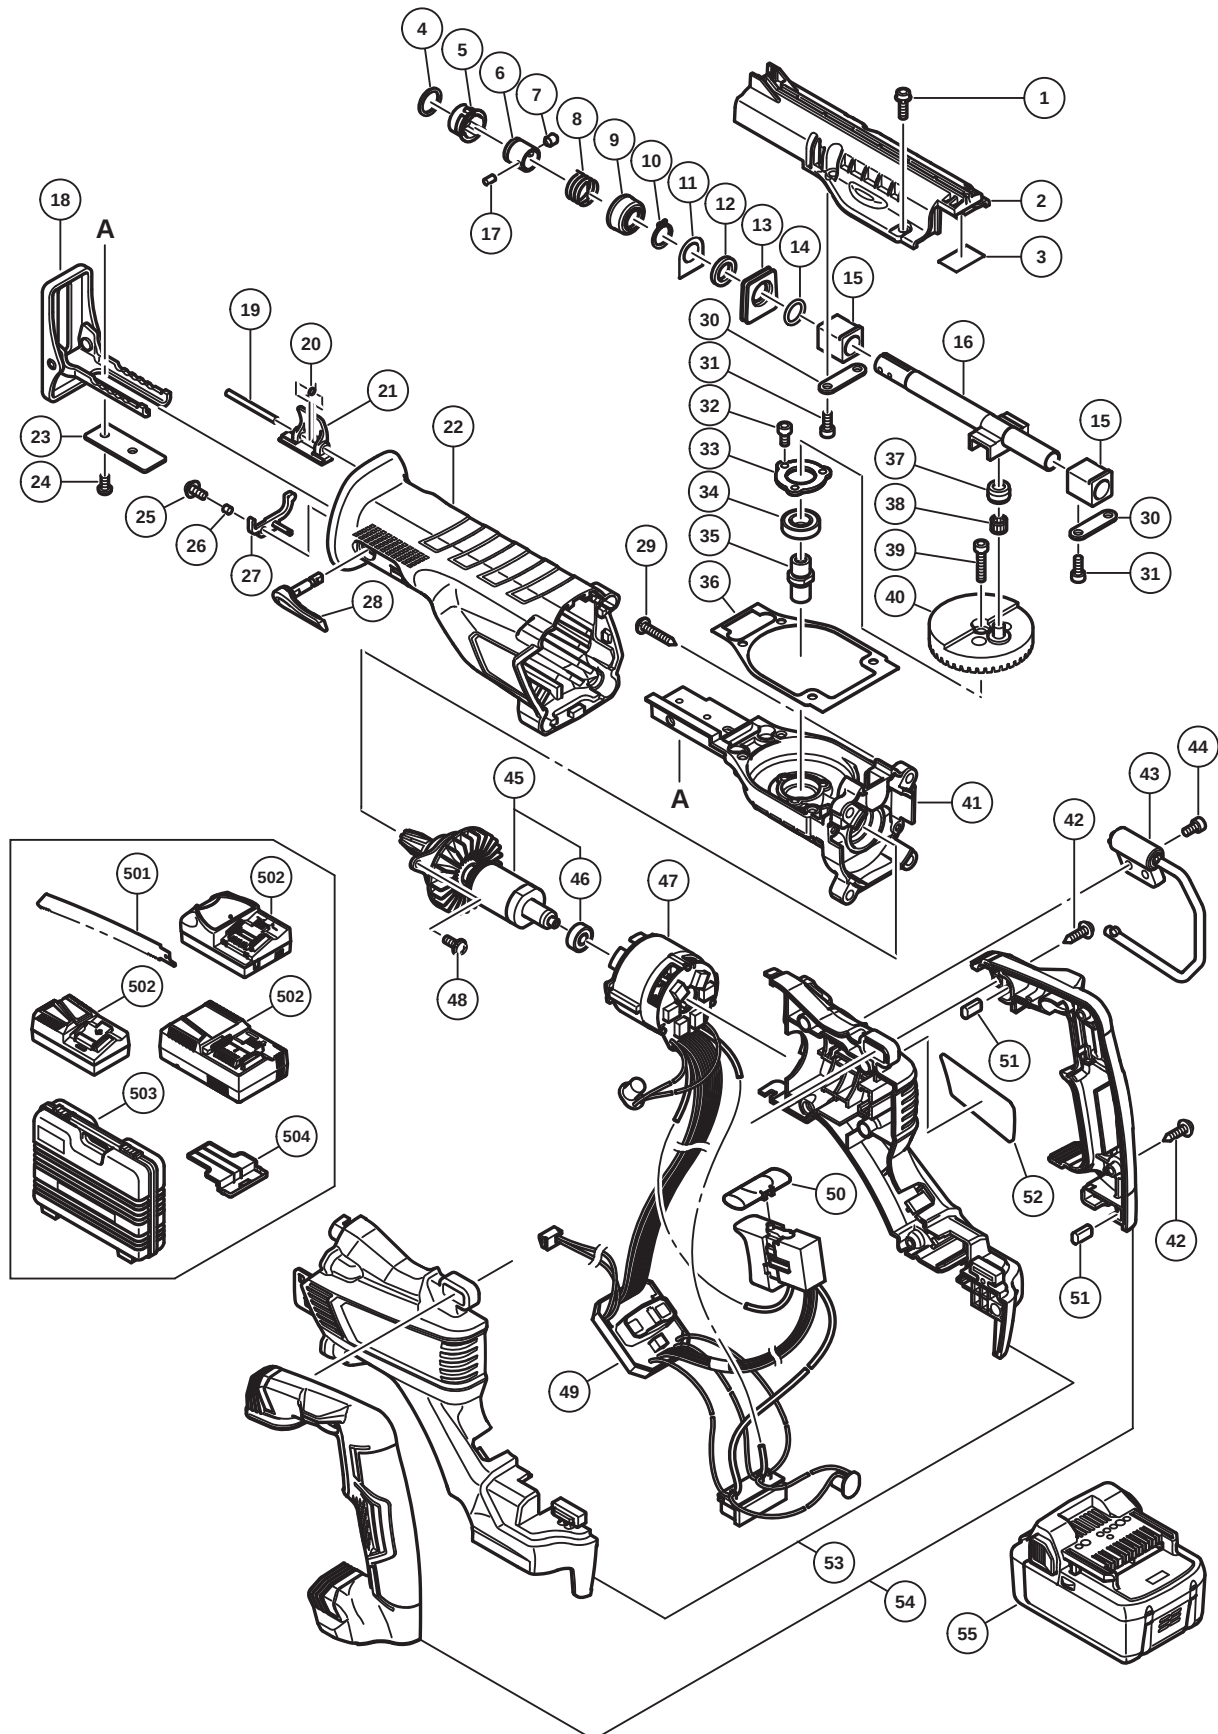

PARTS

CR 18DBL

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	305574	HEX. SOCKET HD. BOLT (W/SP.WASHER) M5 X 16	4		
2	371365	UPPER COVER	1		
3	319874	PACKING (B)	1		
4	371368	SPIRAL RETAINING RING D16	1		
5	371376	BLADE HOLDER	1		
6	371381	SLEEVE	1		
7	371378	HOLDER PIN	1		
8	371379	BLADE SPRING	1		
9	371377	BLADE HOLDER COVER	1		
10	371367	RETAINING RING FOR D13 SHAFT	1		
11	371371	PACKING WASHER	1		
12	371370	FELT PACKING	1		
13	371363	SEAL SLEEVE	1		
14	371369	O-RING	1		
15	371362	METAL (B)	2		
16	371366	PLUNGER (A)	1		
17	371380	PIN	1		
18	371382	BASE	1		
19	371374	BLADE LAVER SHAFT	1		
20	371375	BLADE LEVER SPRING	1		
21	371373	BLADE LEVER	1		
22	371386	FRONT COVER	1		
23	371383	BASE PLATE	1		
24	332662	HEX SOCKET BOLT M5 X 12	2		
25	949216	MACHINE SCREW M4 X 10 (10 PCS.)	1		
26	371929	DISTANCE PIECE	1		
27	371385	FRONT PLATE (A)	1		
28	371384	BASE LEVER	1		
29	986011	TAPPING SCREW (W/SP. WASHER) D5 X 30	4		
30	371364	HOLDER COVER (B)	2		
31	371989	SEAL LOCK HEX. SOCKET HD. BOLT M5 X 14	4		
32	371990	SEAL LOCK HEX. SOCKET HD. BOLT M4 X 12	3		
33	371360	BEARING COVER (B)	1		
34	6901VV	BALL BEARING 6901VV	1		
35	371359	SPINDLE	1		
36	371372	SEAL PACKING (A)	1		
37	983541	CONNECTING PIECE (A)	1		
38	324470	NEEDLE ROLLER	1		
39	371991	SEAL LOCK HEX. SOCKET HD. BOLT M6 X 20	1		
40	371361	GEAR	1		
41	371358	GEAR COVER	1		
42	339250	TAPPING SCREW (W/FLANGE) D4 X 20	10		
43	371387	HOOK	1		
44	371992	SEAL LOCK HEX. SOCKET HD. BOLT M5 X 10	2		
45	361062	ROTOR ASS'Y	1	INCLUD.46	
46	606ZZM	BALL BEARING 606VV	1		
47	340968	STATOR FET PCB ASS'Y	1	INCLUD.49	
48	951039	MACHINE SCREW (W/SP. WASHER) M4 X 12	2		
49	371357	CONTROLLER TERMINAL SET	1		
50	319760	PUSHING BUTTON	1		

PARTS

CR 18DBL

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
51	371356	HANDLE DAMPER	4		
52		NAME PLATE	1		
53	371994	HOUSING SET	1		
54	371995	HANDLE SET	1		
* 55	335791	BATTERY BSL 1850 (USA,CAN)	2	INCLUD.504	
* 55	336265	BATTERY BSL 1850 (CHN)	2	INCLUD.504	
* 55	338891	BATTERY BSL 1860 (EUROPE,AUS,NZL)	2	INCLUD.504	
* 55	338890	BATTERY BSL 1860 (USA,CAN)	1	INCLUD.504	

STANDARD ACCESSORIES

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
* 501	370683	CURVED BLADES NO.141(S)150L P.14 (3 PCS.)	1		
* 501	371902	CURVED BLADES NO.158 200L P.8 (3 PCS.)	1	FOR USA,CAN	
* 502		CHARGER (MODEL UC 18YFSL)	1		
* 502		CHARGER (MODEL UC 18YSL3)	1		
* 502		CHARGER (MODEL UC 18YML2)	1		
503	371355	CASE	1		
504	329897	BATTERY COVER	1		

OPTIONAL ACCESSORIES

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
601	959611	SABER SAW BLADES NO.4 (5 PCS.)	1		
602	958185	SABER SAW BLADES NO.5 (5 PCS.)	1		
603	959799	SABER SAW BLADES NO.95 (3 PCS.)	1		
604	959800	SABER SAW BLADES NO.96 (3 PCS.)	1		
605	318611	SABER SAW BLADES NO.101 150L P.10 (5 PCS.)	1		
606	318612	SABER SAW BLADES NO.102 228L P.10 (5 PCS.)	1		
607	318613	SABER SAW BLADES NO.103 150L P.14 (5 PCS.)	1		
608	318614	SABER SAW BLADES NO.104 228L P.14 (5 PCS.)	1		
609	318617	SABER SAW BLADES NO.107 150L P.24 (5 PCS.)	1		
610	318618	SABER SAW BLADES NO.108 228L P.24 (5 PCS.)	1		
611	324818	SABER SAW BLADES NO.109 150L P.18 (5 PCS.)	1		
612	324819	SABER SAW BLADES NO.110 228L P.18 (5 PCS.)	1		
613	318619	SABER SAW BLADES NO.121 305L P.6 (5 PCS.)	1		
614	318620	SABER SAW BLADES NO.131 305L P.10/14(5 PCS.)	1		
615	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1		
616	370684	CURVED BLADES NO.142(S)200L P.14 (3 PCS.)	1		
617	370685	CURVED BLADES NO.143(S)250L P.14 (3 PCS.)	1		