









DSX Touch







DEX Next



DSX Touch; DEX Next

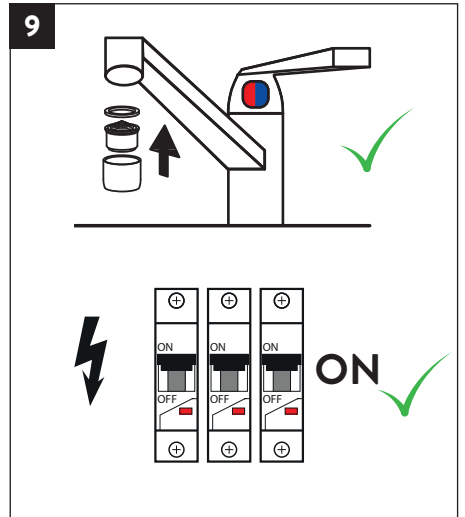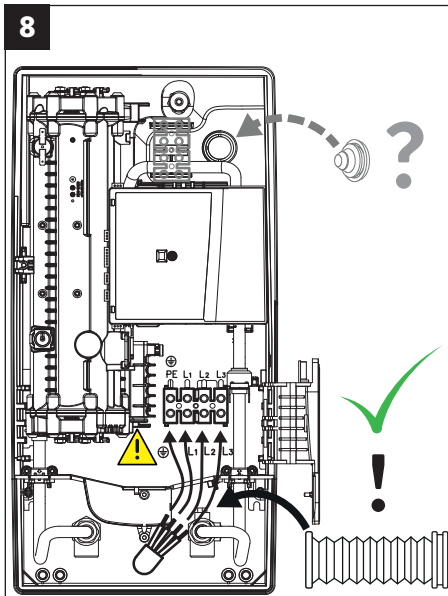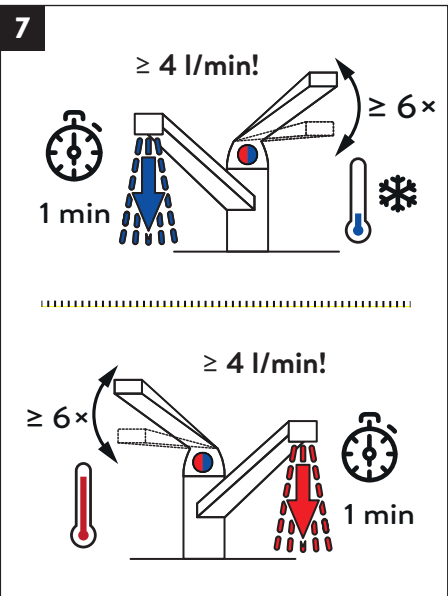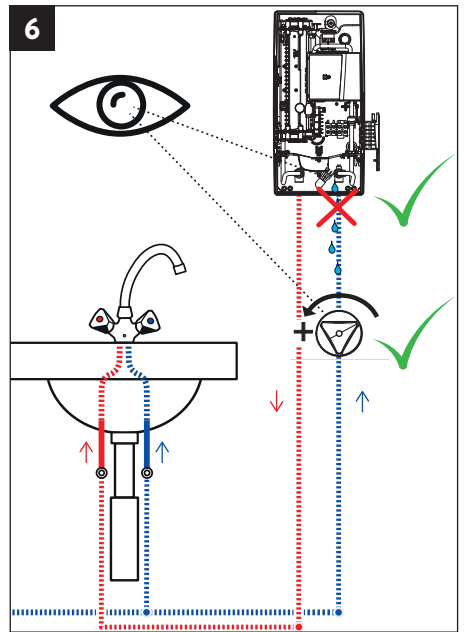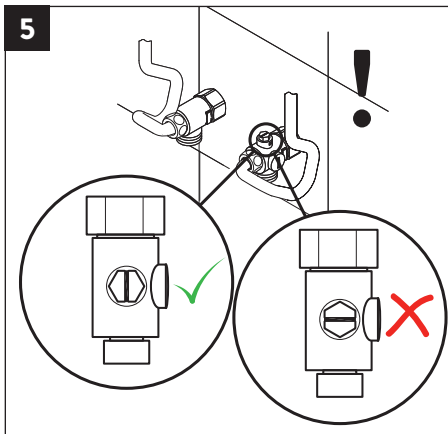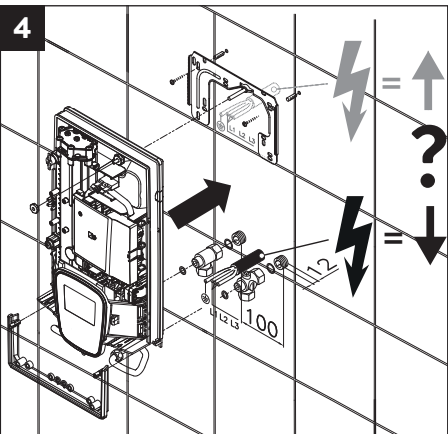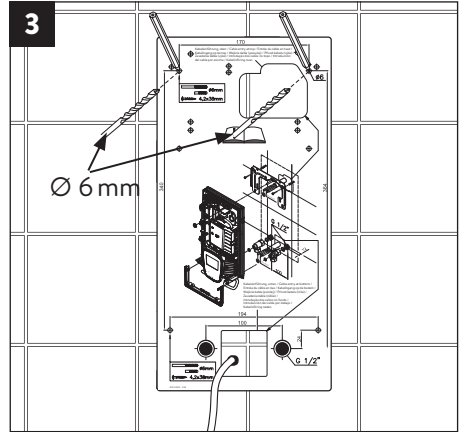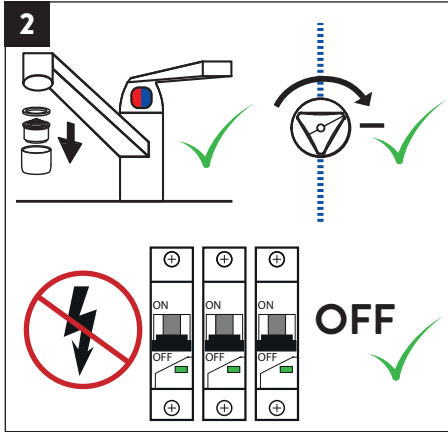

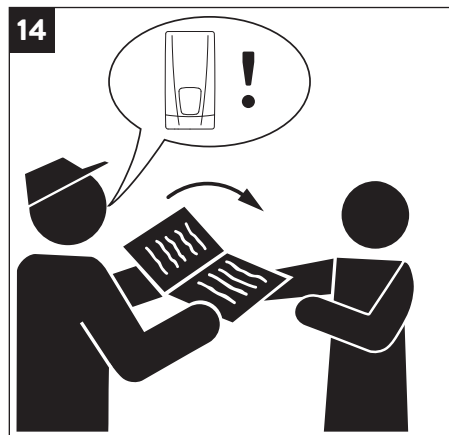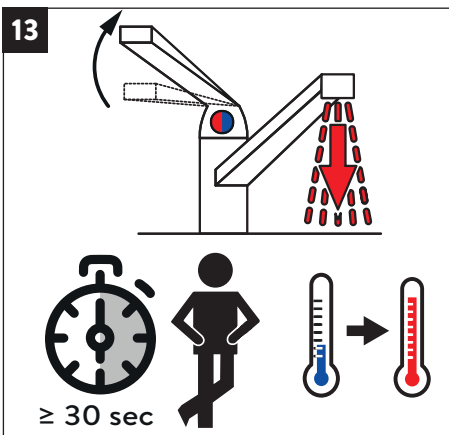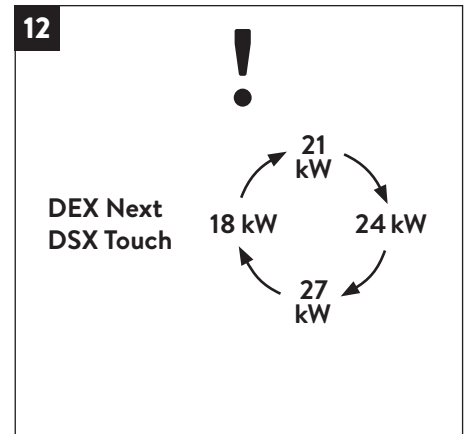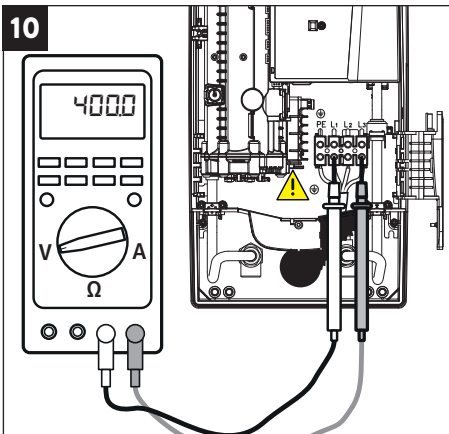

Fehler? / Error? / Erreurs?

