



### Spare parts list for REBV 3200 E

Pozice	Obj.číslo	Popis	Počet
1	REBV3200E-1	Right housing	1
2	REBV3200E-2	Impeller baffle	1
3	REBV3200E-3	Switch	1
4	REBV3200E-4	Spring	1
5	REBV3200E-5	Switch trigger	1
6	REBV3200E-6	Capacitor	1
7	REBV3200E-7	Left housing	1
8	REBV3200E-8	Cable retainer	1
9	REBV3200E-9	Cable	1
10	REBV3200E-10	Blow or Suck selector lever	1
11	REBV3200E-11	Screw ST4 x 16	3
12	REBV3200E-12	Blower and suck change baffle	1
13	REBV3200E-13	Collection bag+bracket	1
14	REBV3200E-14	Wheel	2
15	REBV3200E-15	Bracket of wheel	1
16	REBV3200E-16	Down tube	1
17	REBV3200E-17	Up tube	1
18	REBV3200E-18	Screw ST4 x 50	1
19	REBV3200E-19	Stopples	1
20	REBV3200E-20	M8 Lock nut	1
21	REBV3200E-21	Impeller	1
22	REBV3200E-22	Axle sleeve	1
23	REBV3200E-23	Motor assembly	1
24	REBV3200E-24	Shoulder belt	1
25	REBV3200E-25	ST4 x14 Screw	17