



Uživatelský návod pro

bezrámové pantové zástěny

Vitra Line

BN 3015 R

BN 4015 R

BN 4115 R

BN 4215 R

 
BN 4315 R

 
 
 
 
 
 
 
 
 
 
 
 
 
Polysan s.r.o
Nesměřice 52
285 22 Zruč nad Sázavou


www.polysan.cz
www.polysan.net

e-mail: info@polysan.net

tel.: +420 327 585 983
fax.: +420 327 585 989


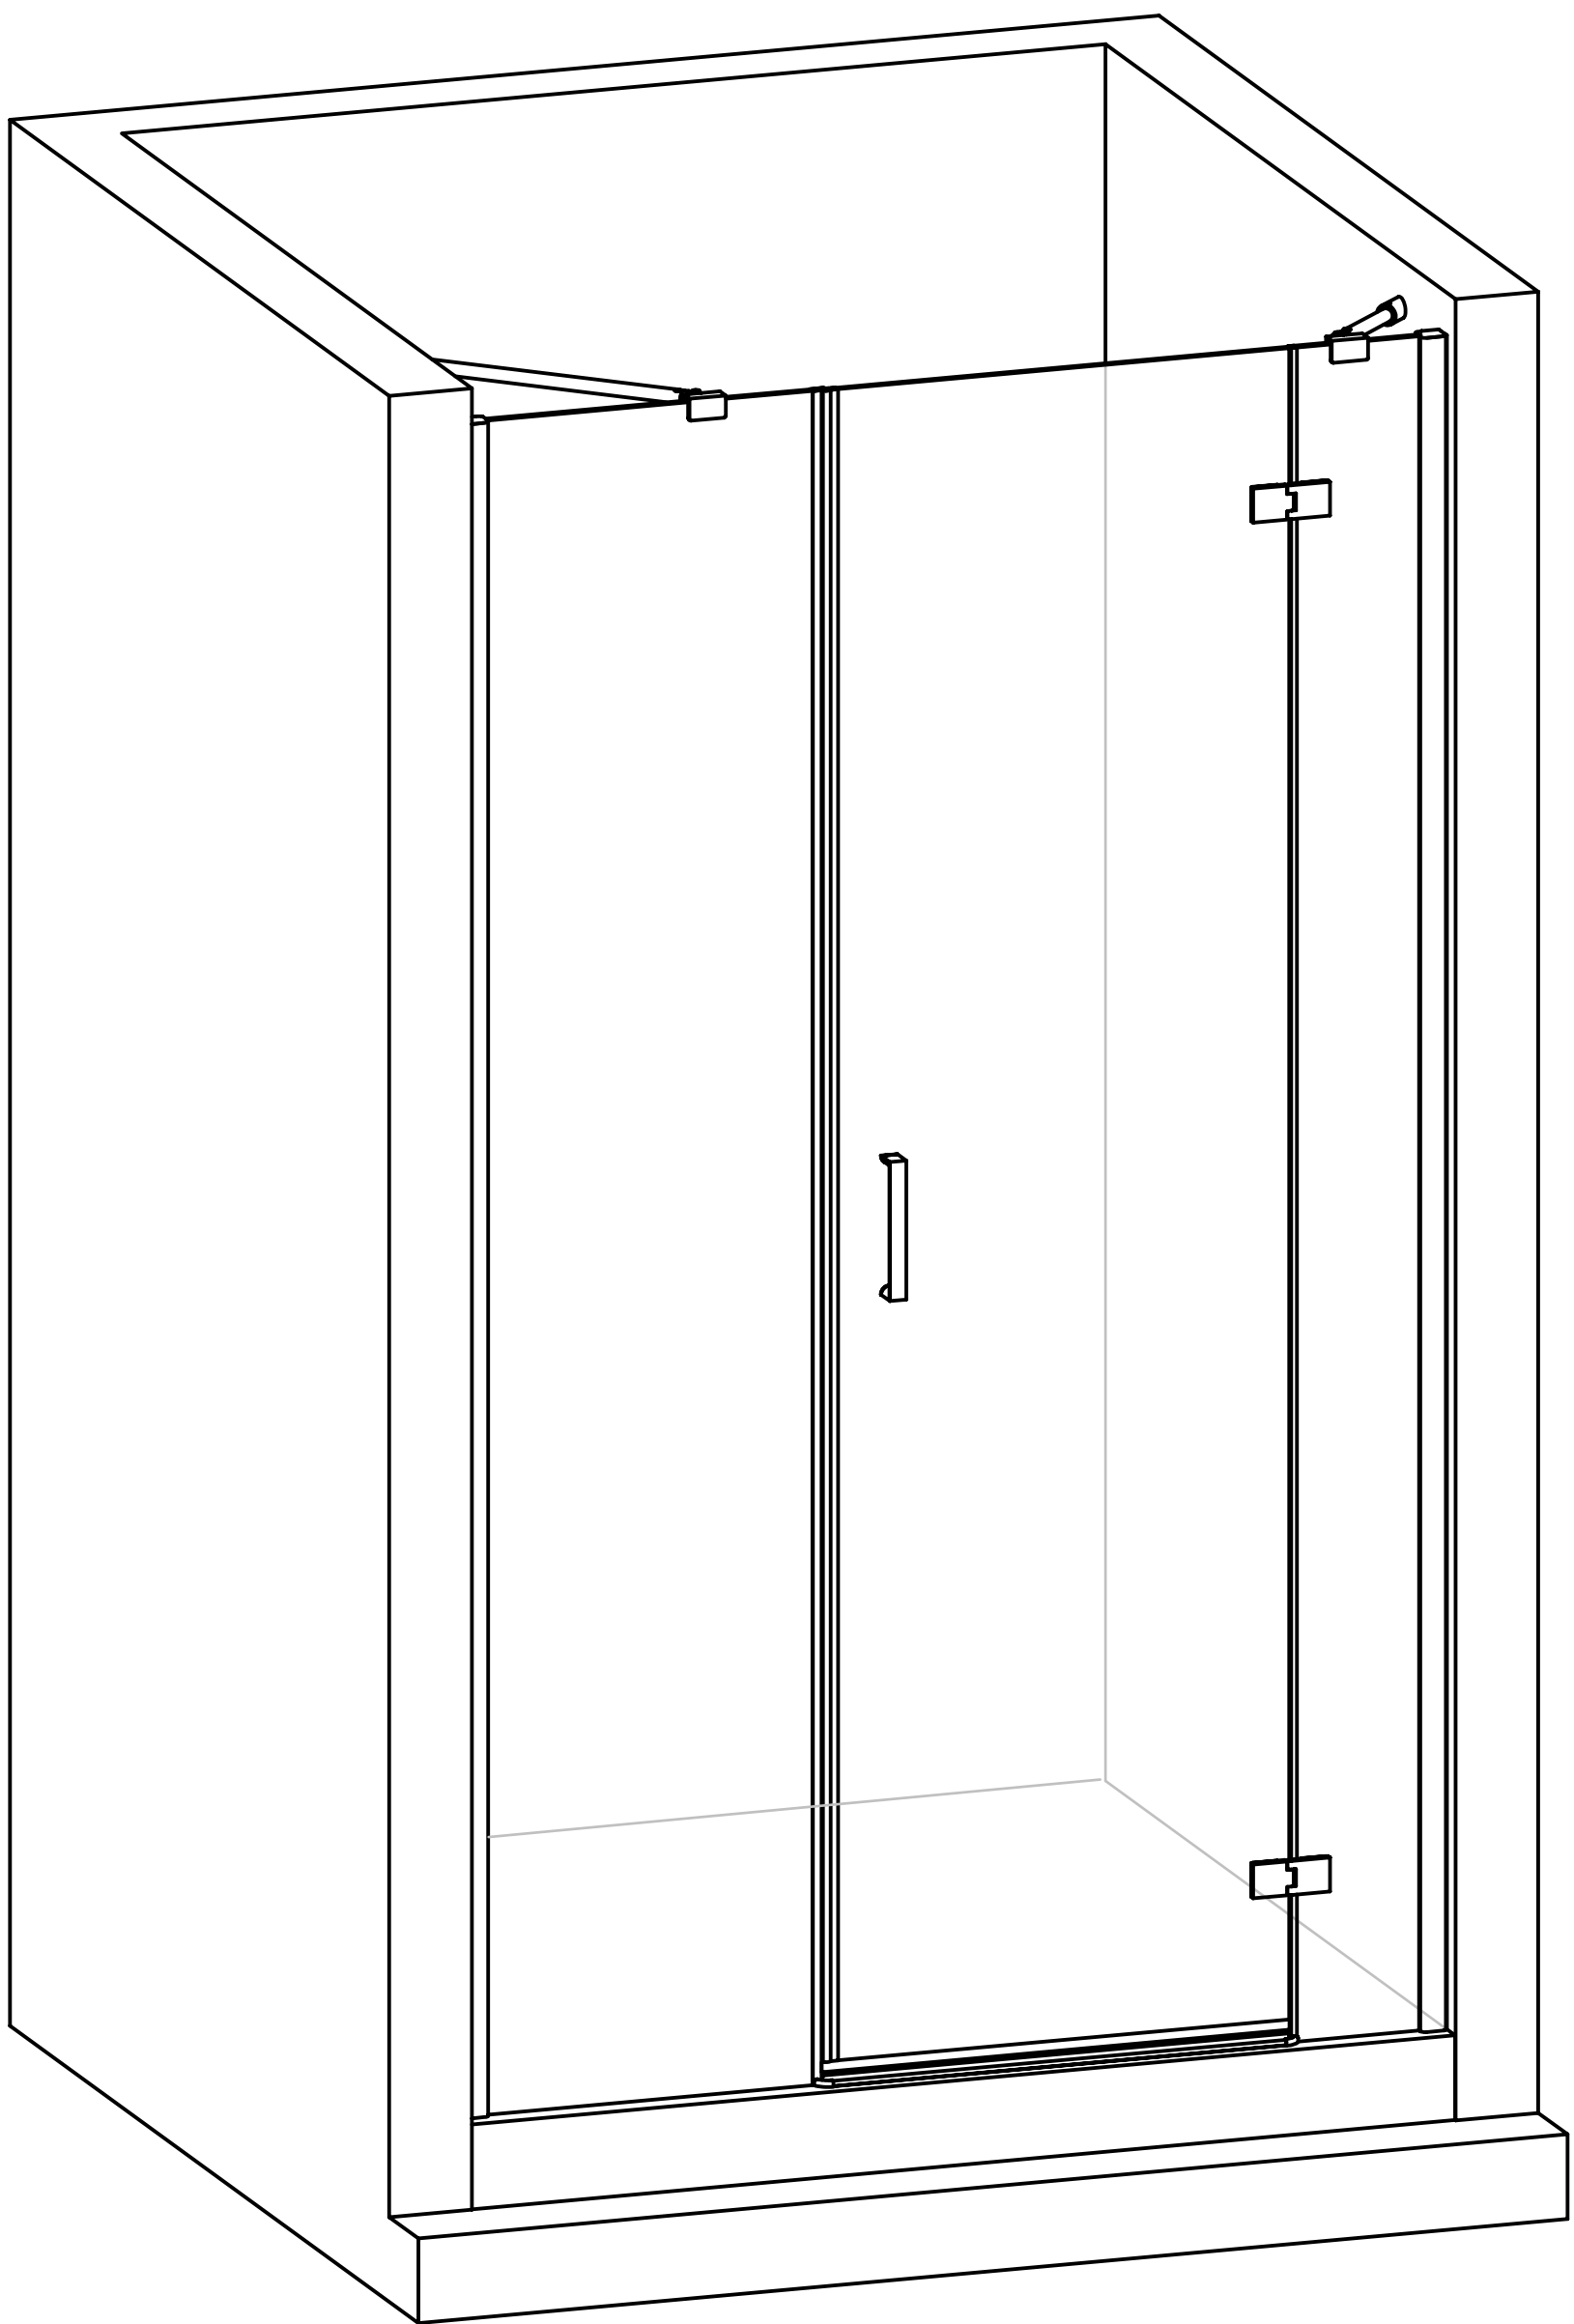


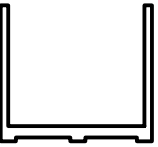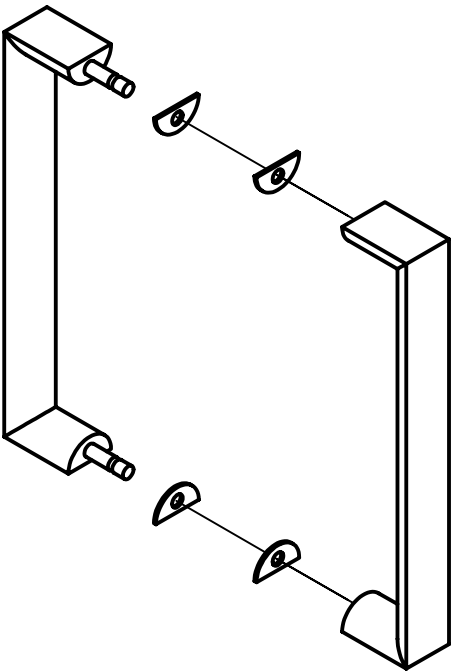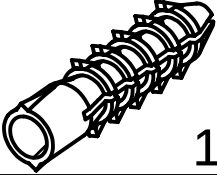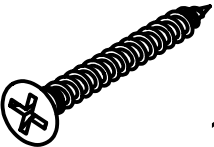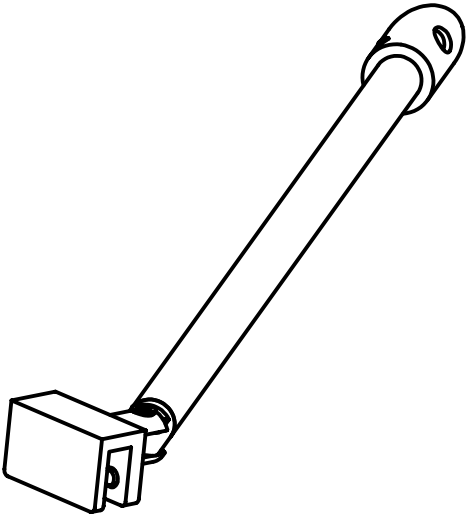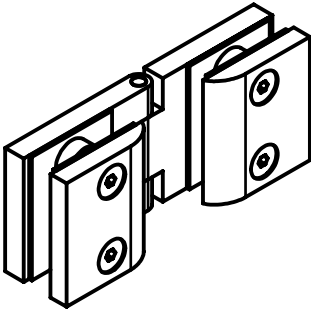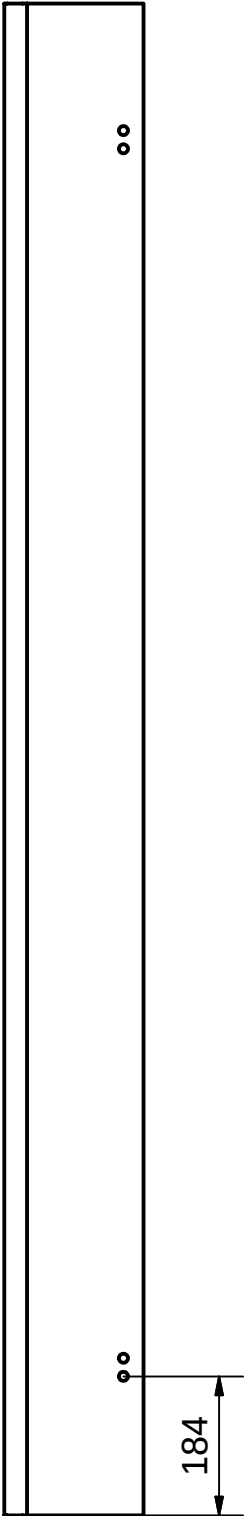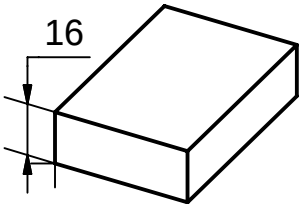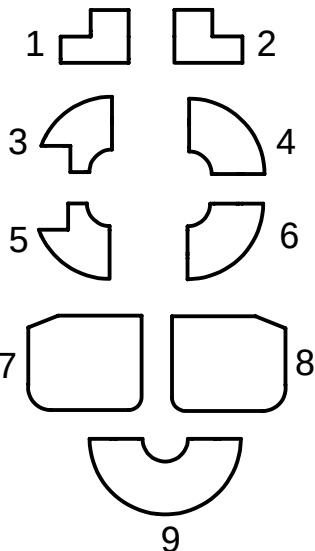1  2x	13  1x		14 1x
2  10x			
3  10x			
4  4x			
5  4x	15  2x		16  2x
6  4x			
7  1x			
8  1x	17  1x		18  1x
9  1x			
10  1x			
11  1x			
12  2x			
Z  9			19  1x

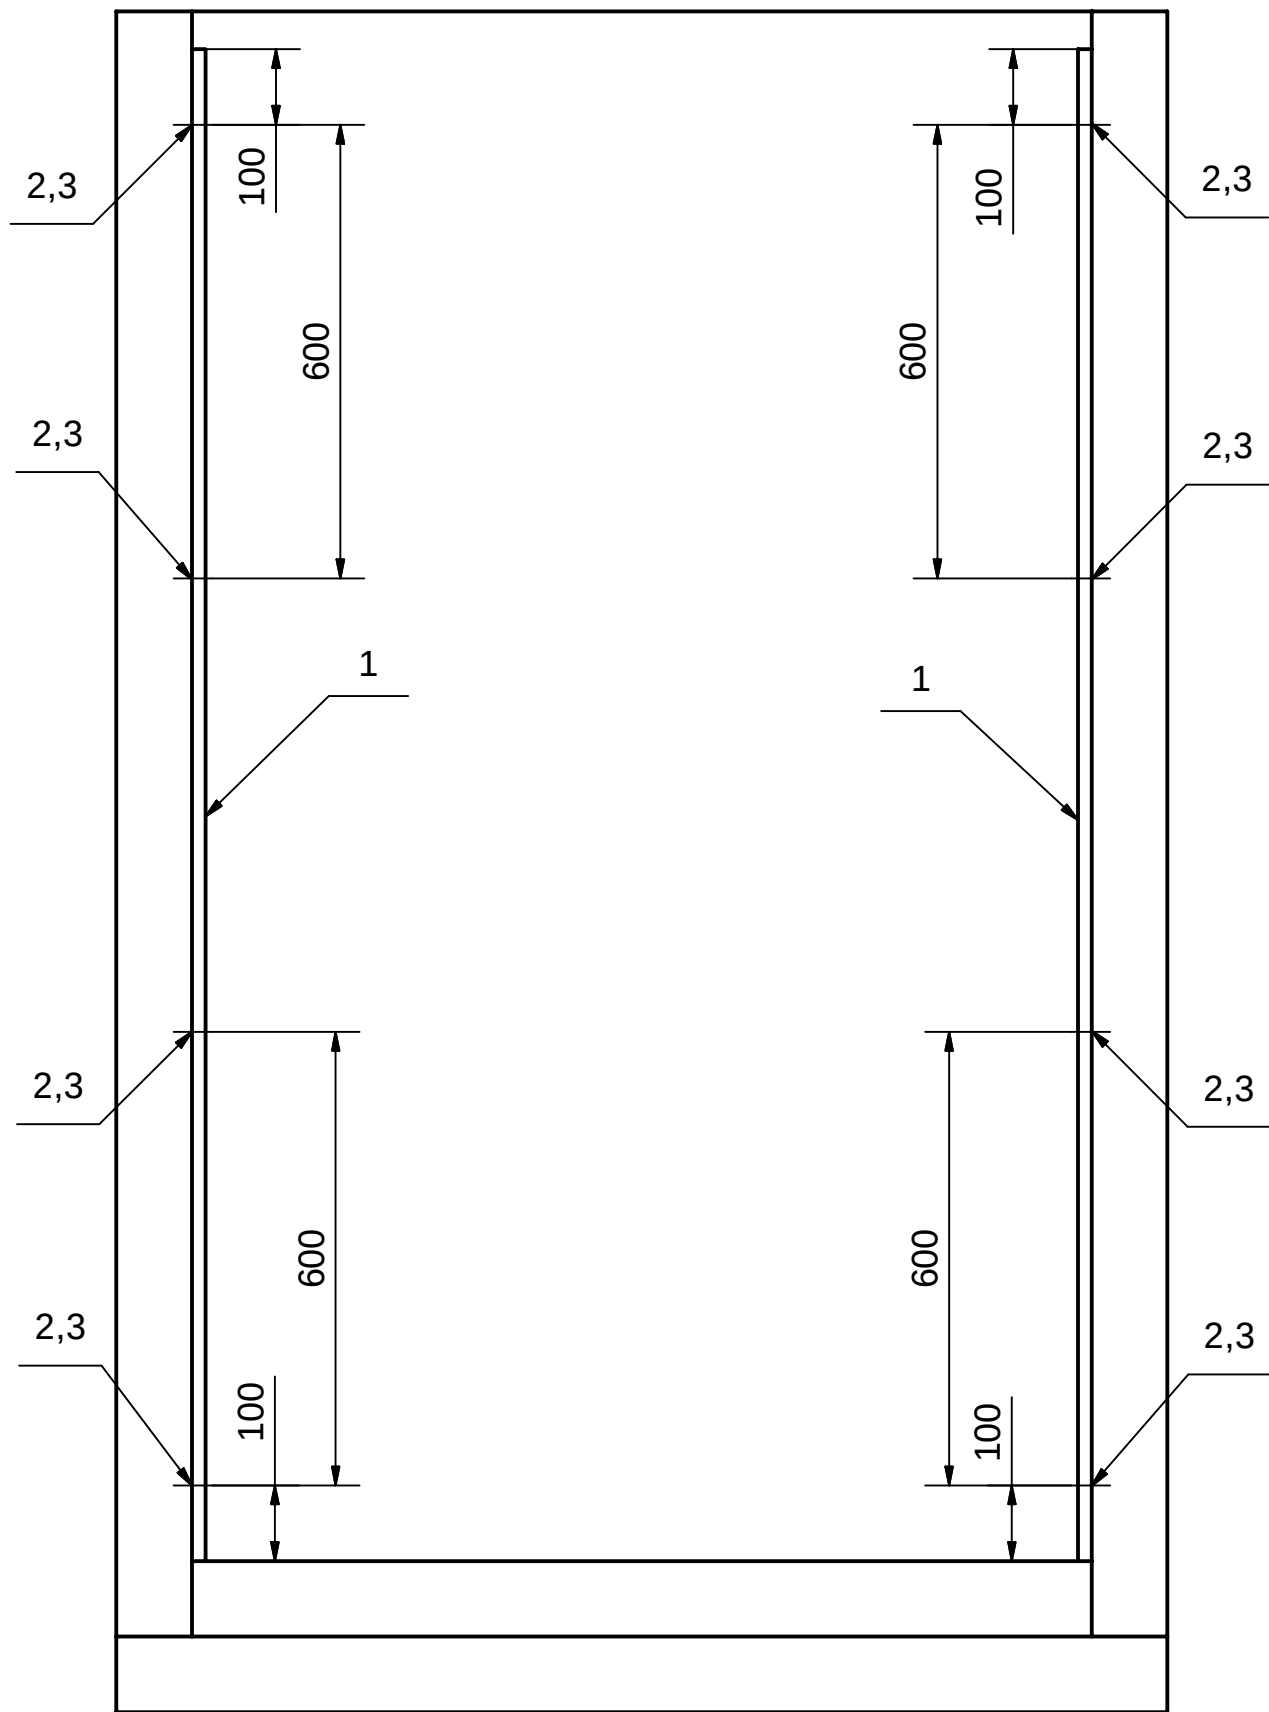 




TYP	X	Y
BN 3015 R	1200± 6	-
BN 4015 R	1300± 6	-
BN 4115 R	1400± 6	-
BN 4215 R	1500± 6	-
BN 4315 R	1600± 6	-

  A (1 : 1)

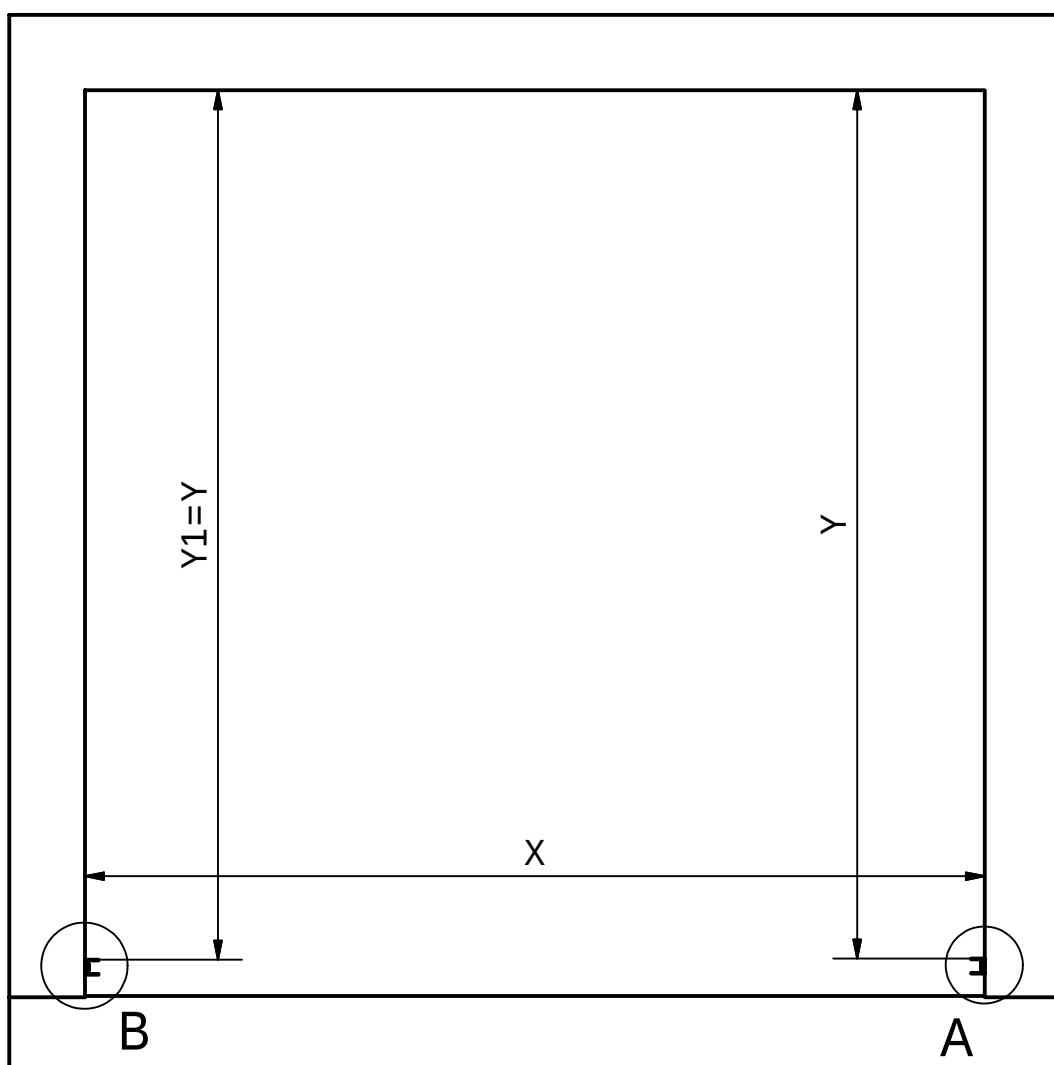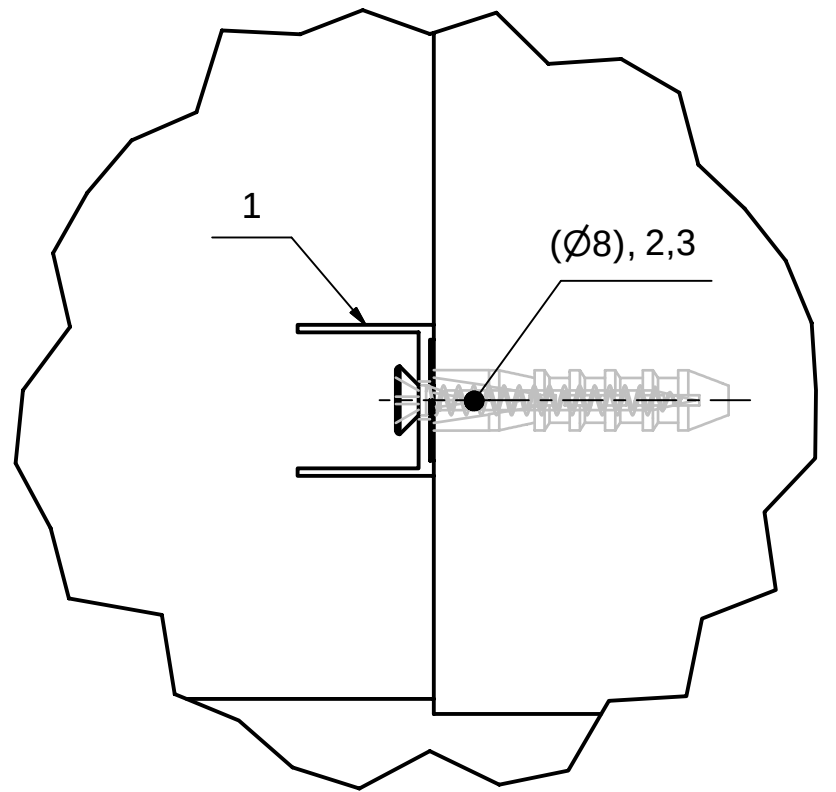


B (1 : 1)

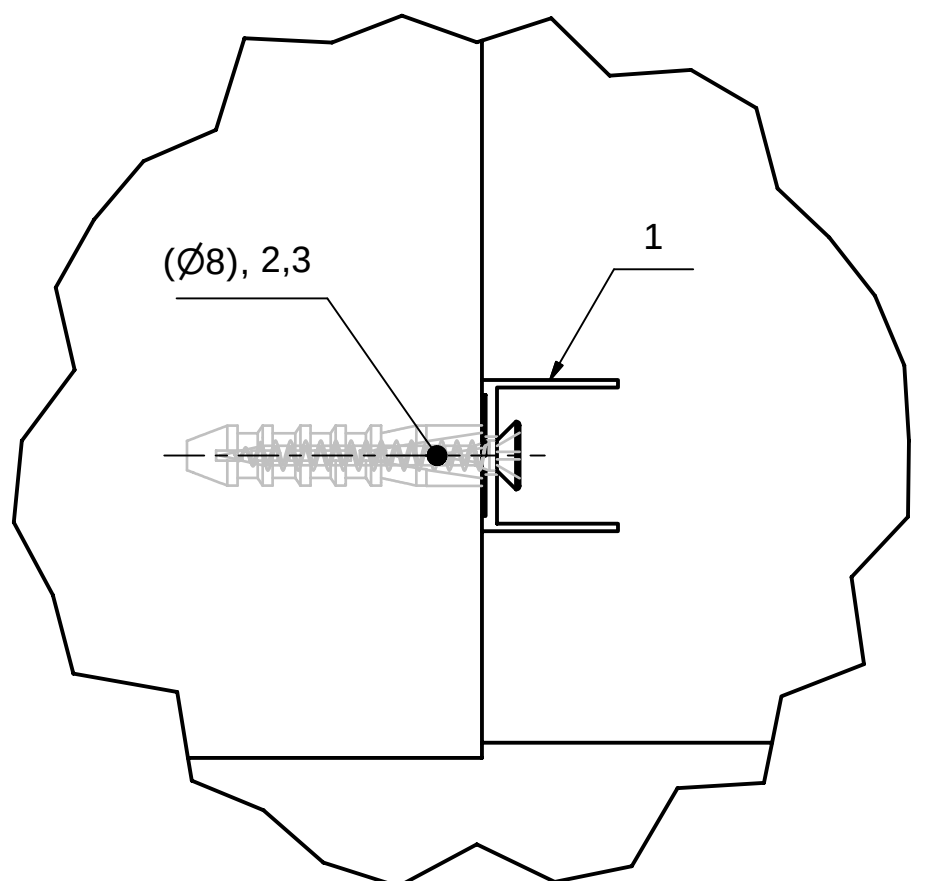 


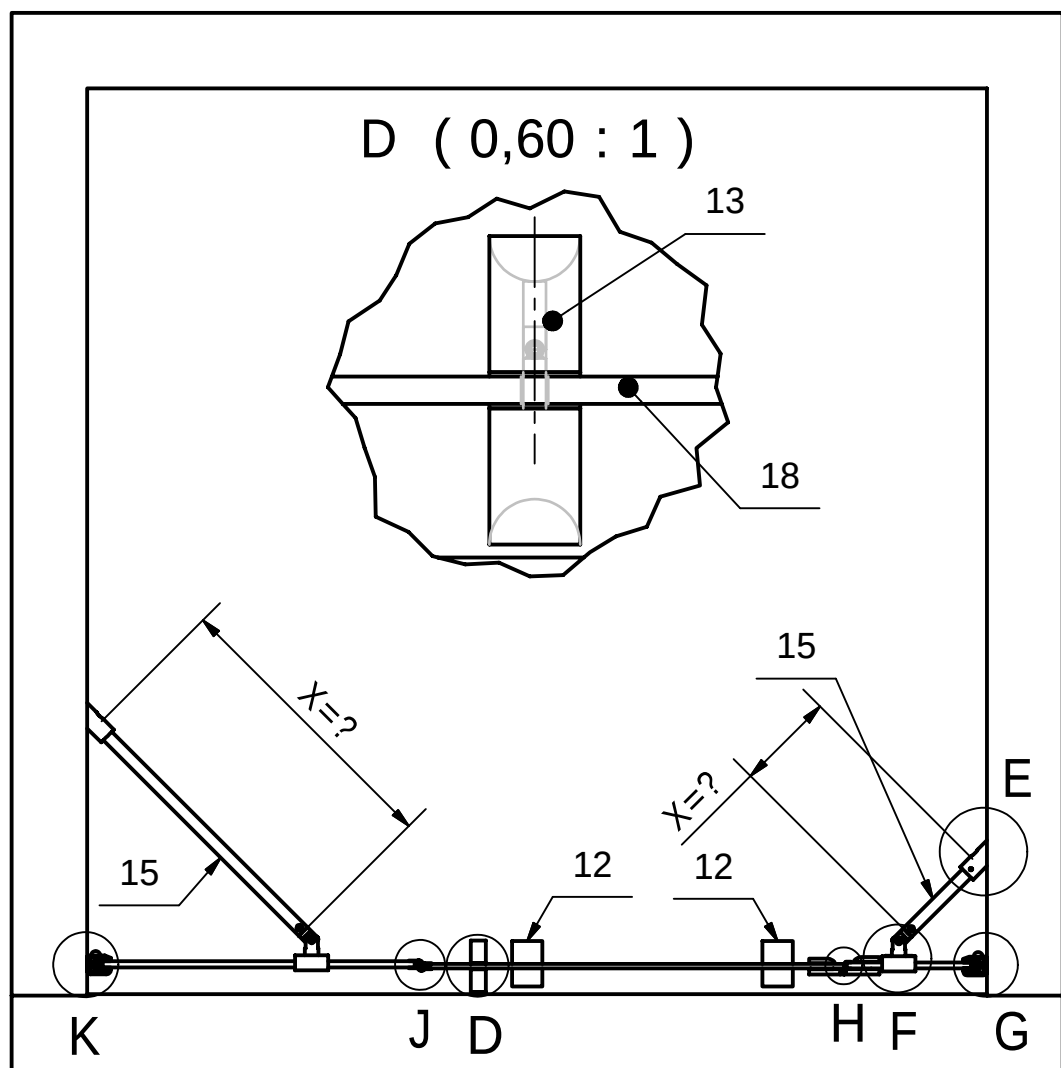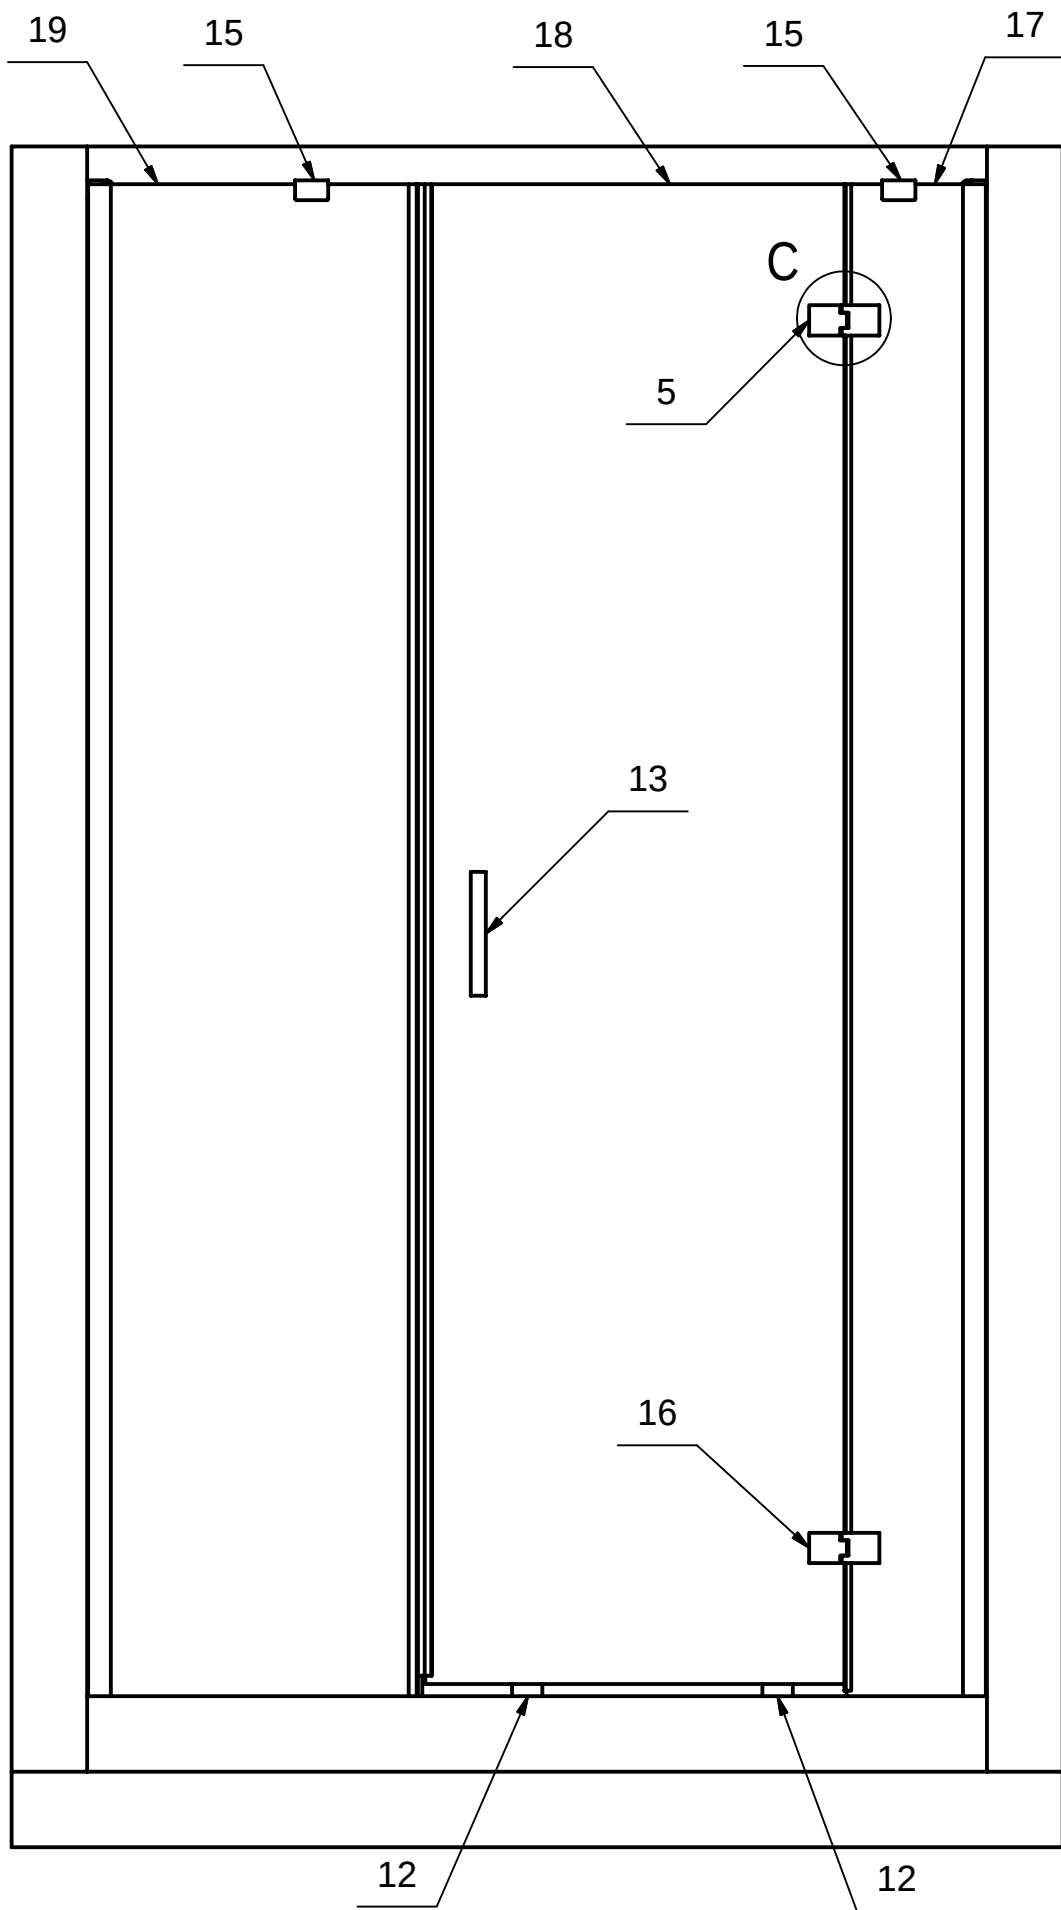  


C (0,60 : 1)

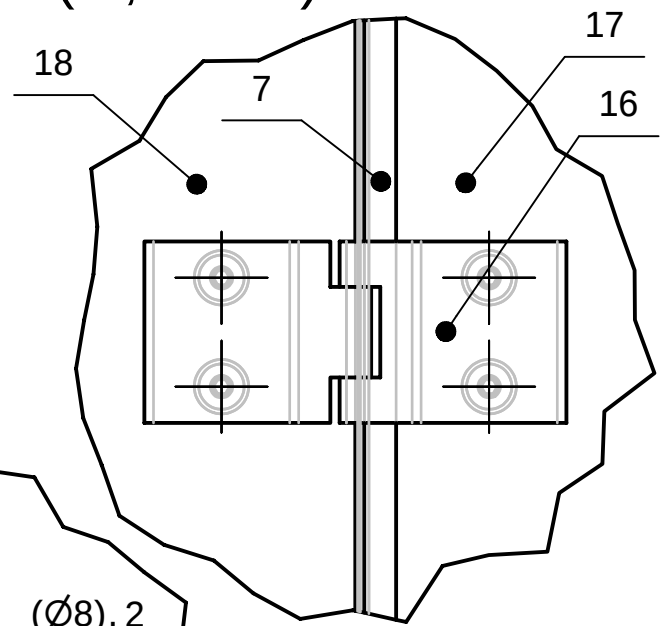 


E (0,60 : 1)

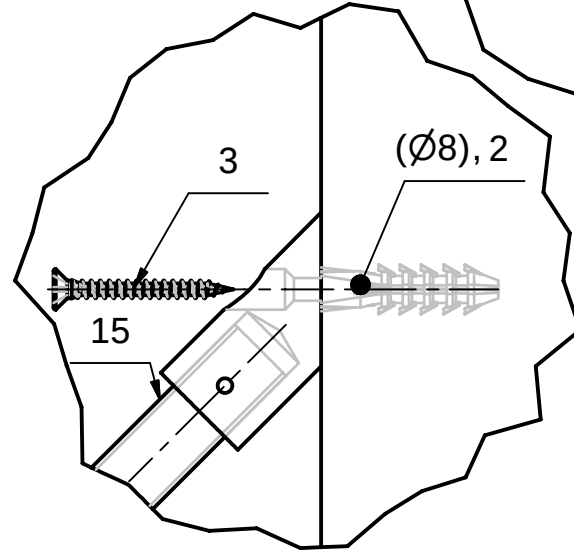 


F (0,60 : 1)

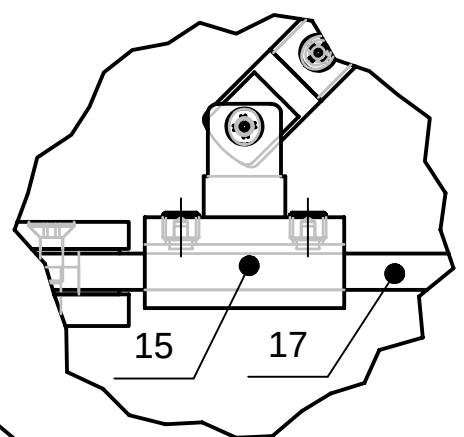 


G (1 : 1)

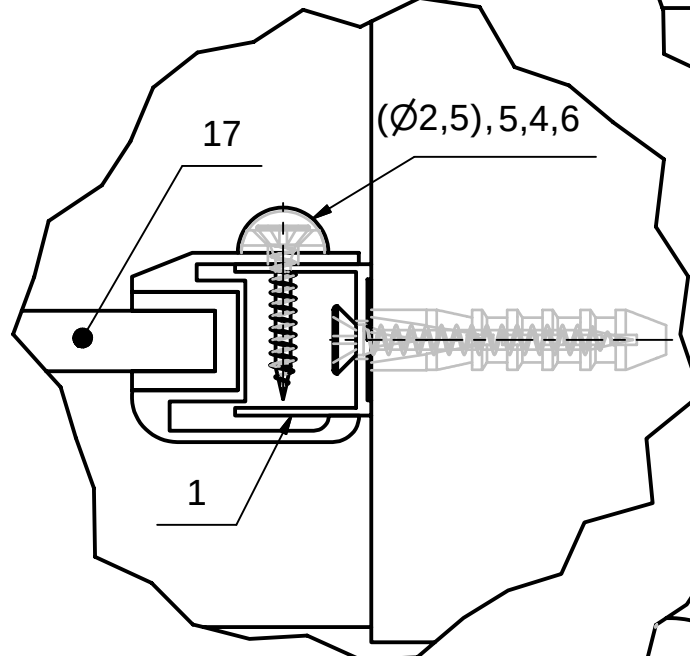 


H (1 : 1)


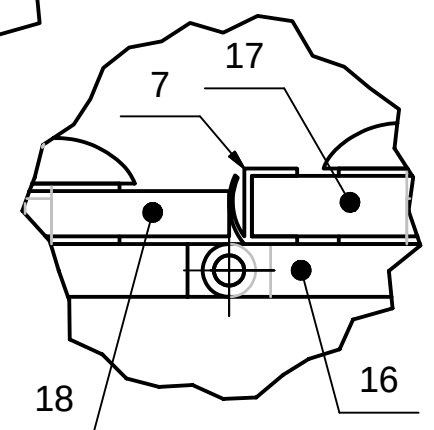 


J (1 : 1)

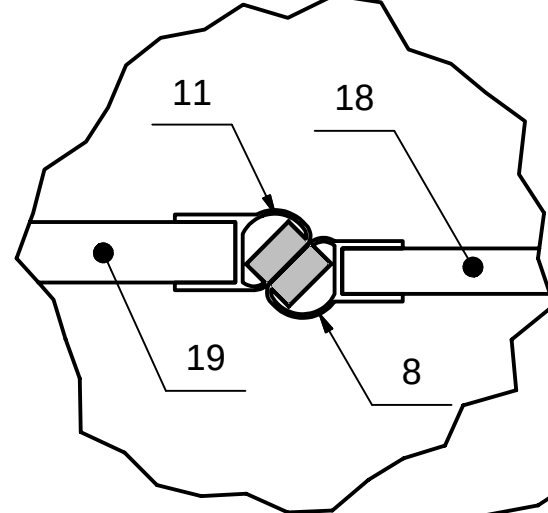 


K (1 : 1)

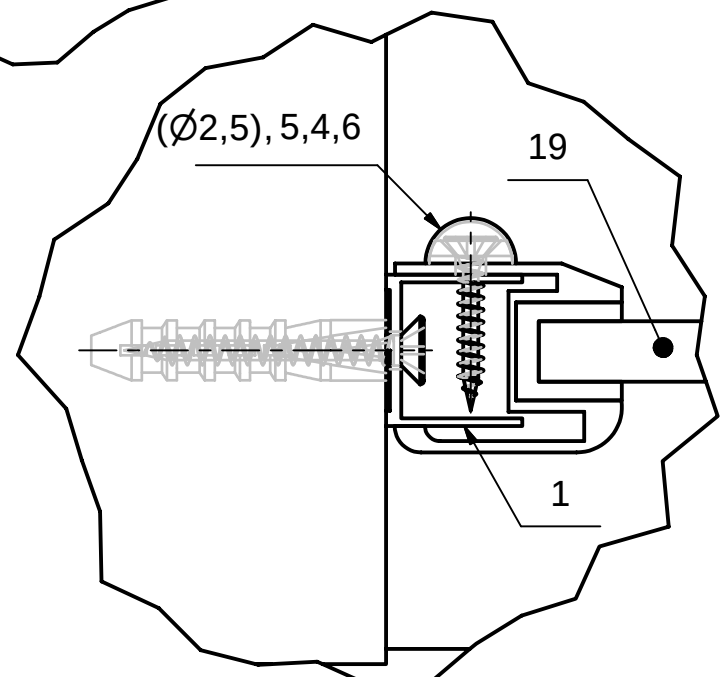 


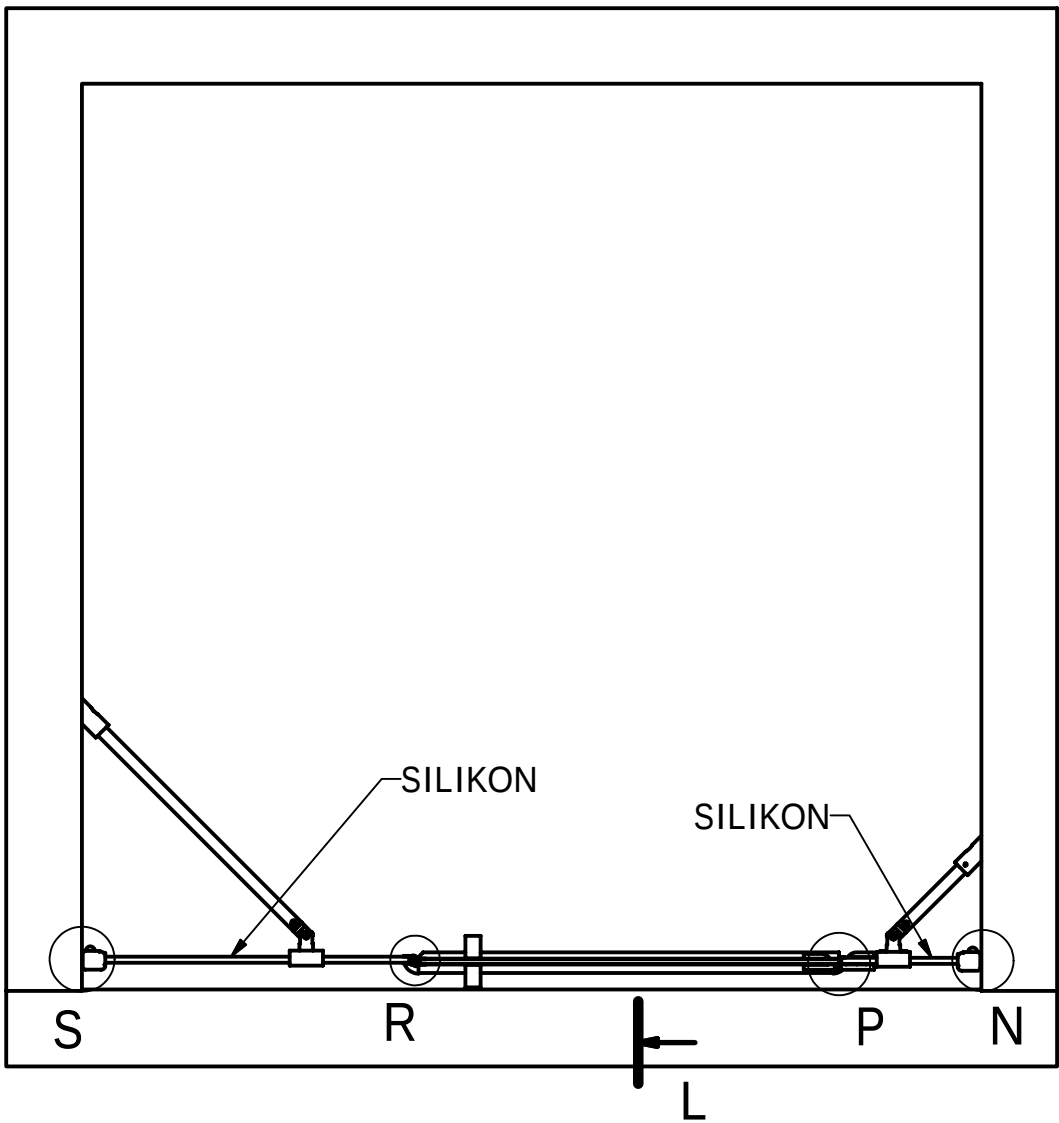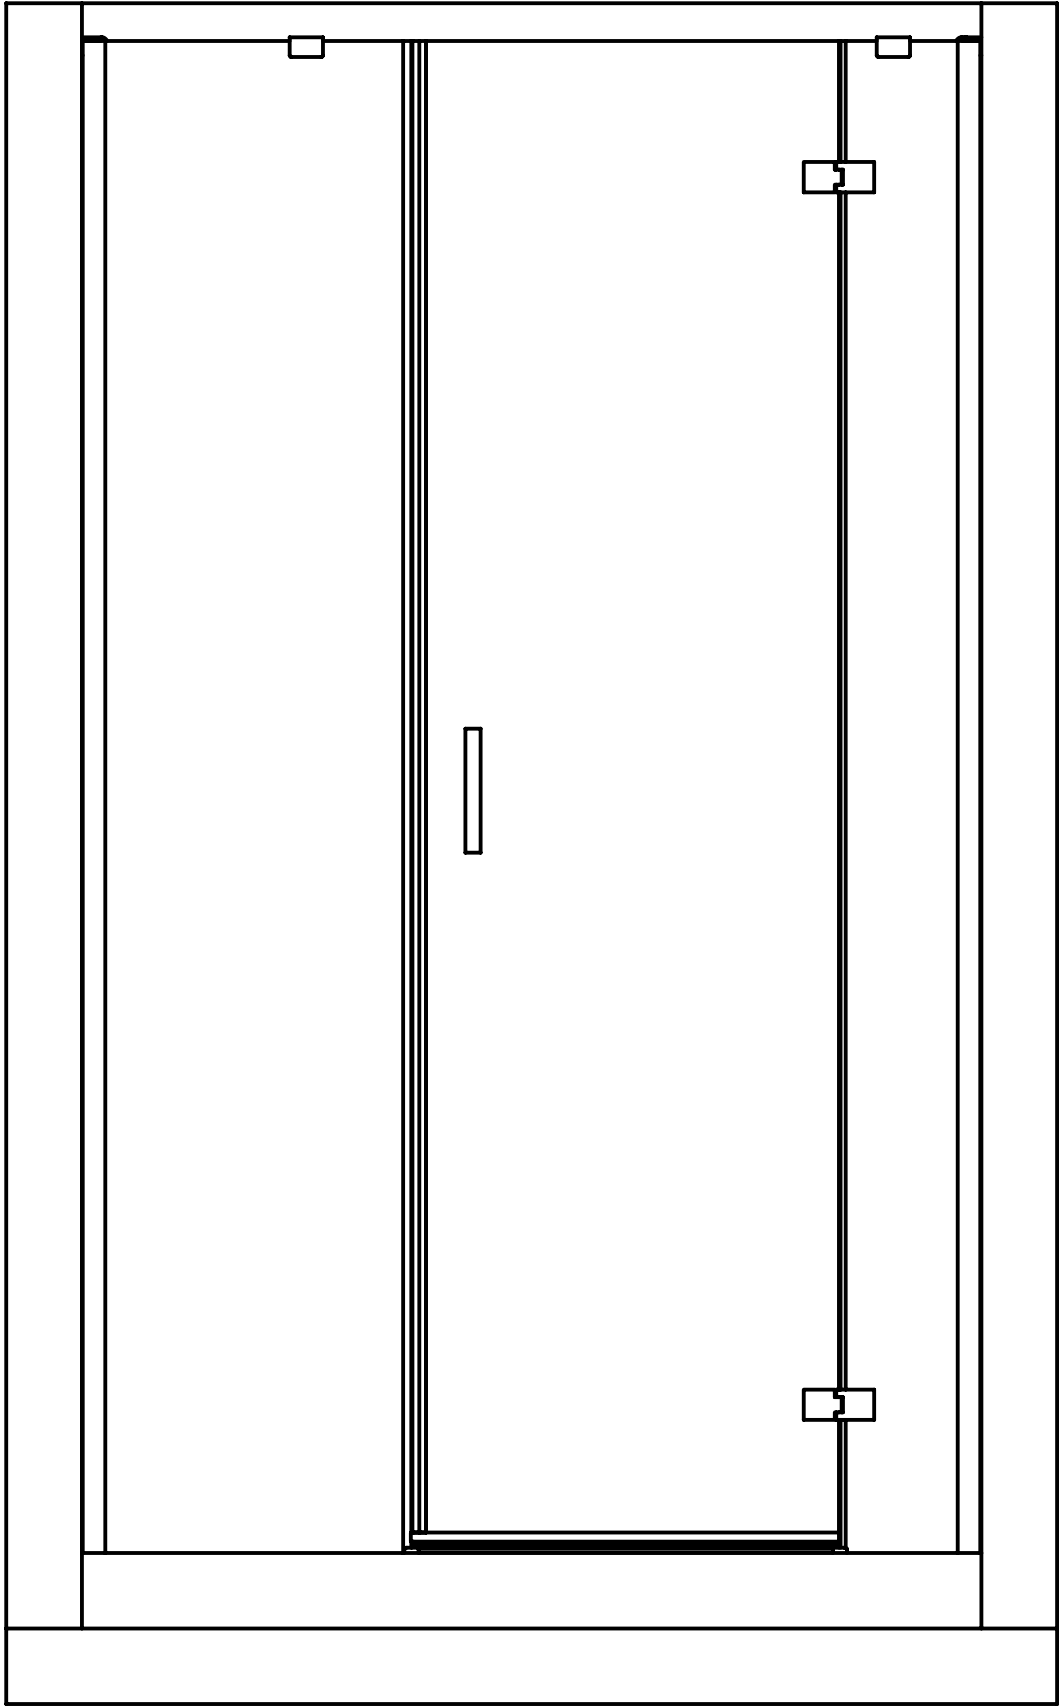  


L (1 : 1)

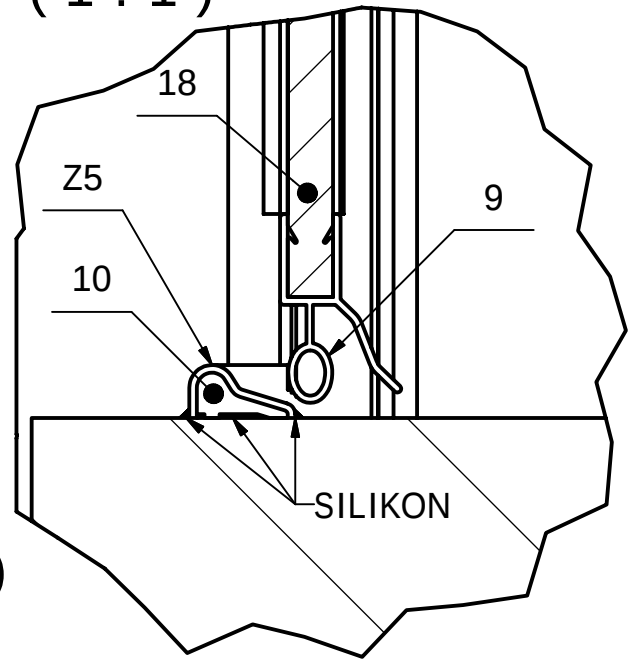 


N (1 : 1)

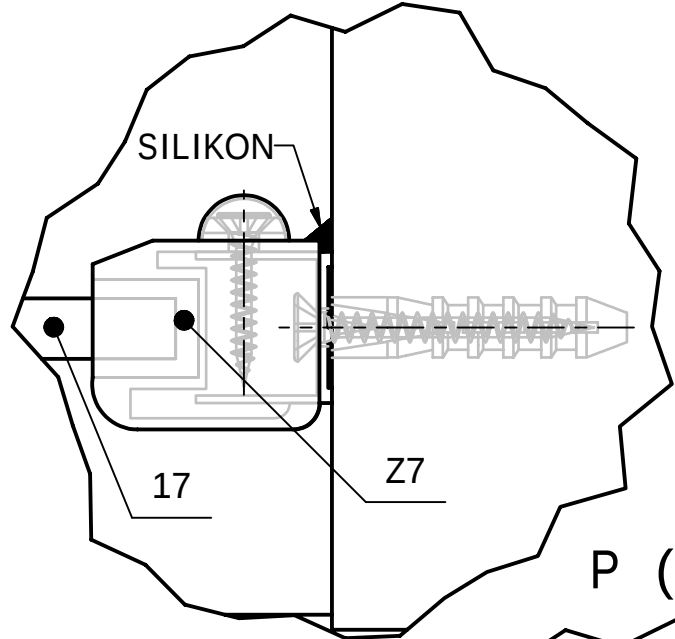 

P (1 : 1)

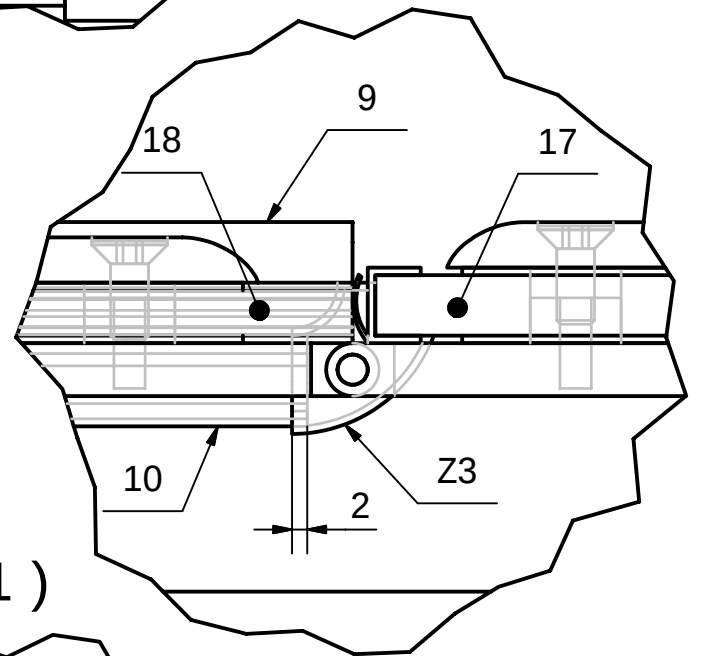 

R (1 : 1)

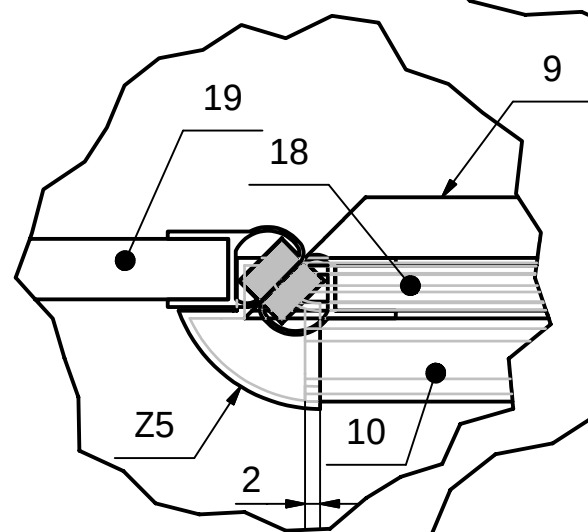 

S (1 : 1)

