
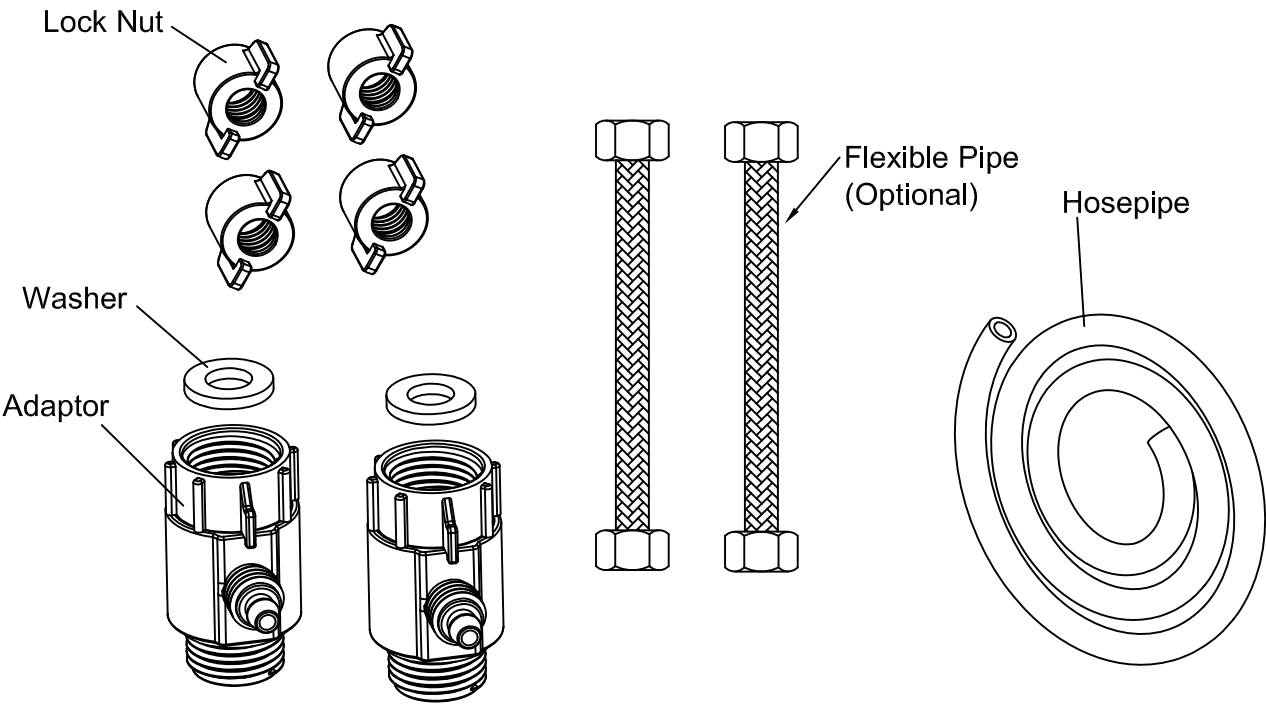


Installation Instruction


MT101 Cold And Hot Water Bidet

Component List

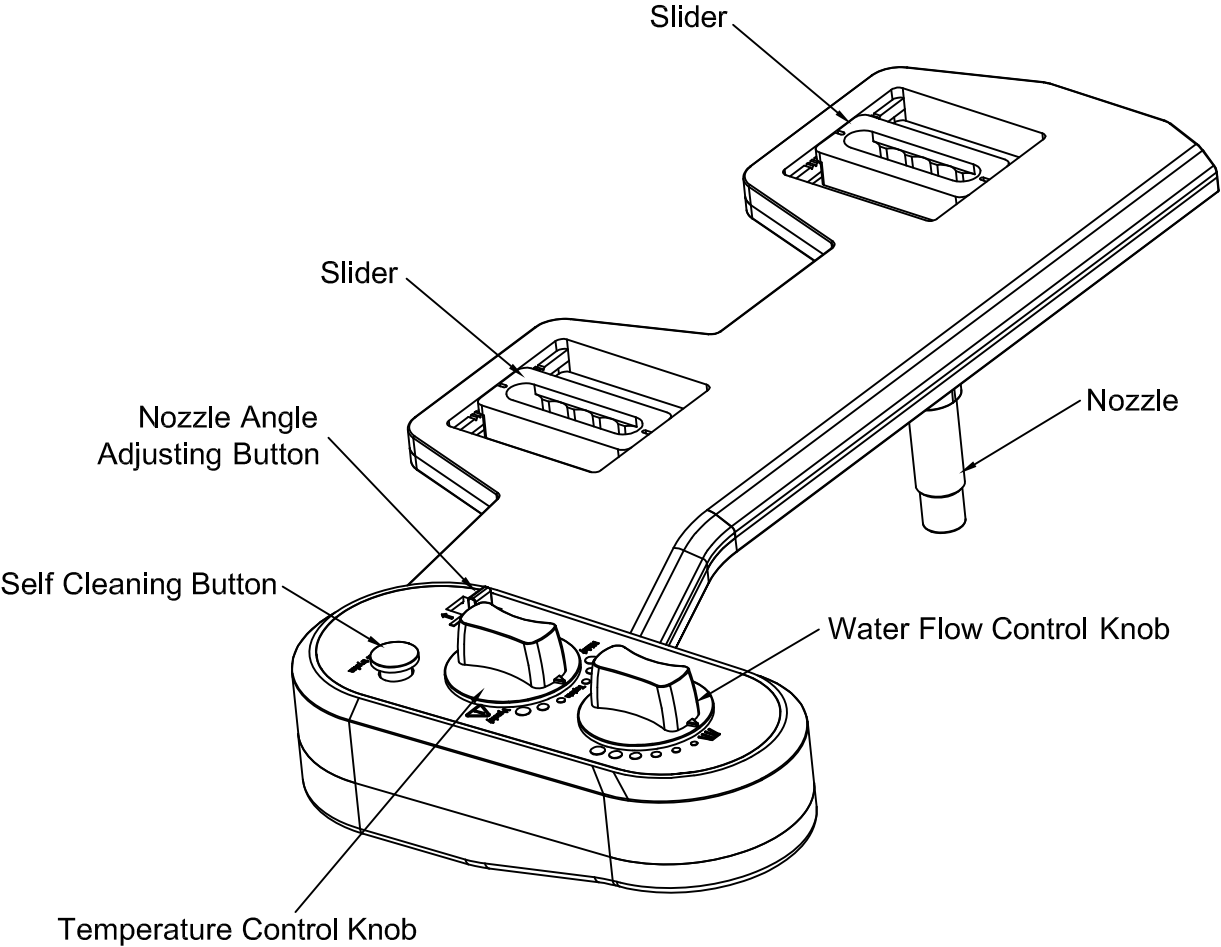


Installation Steps

1

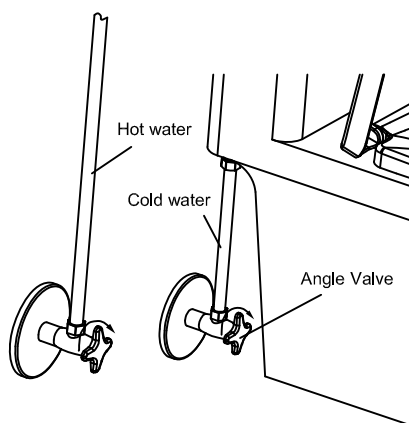


Turn off the angle valve, and then flush out all the water in the tank

2

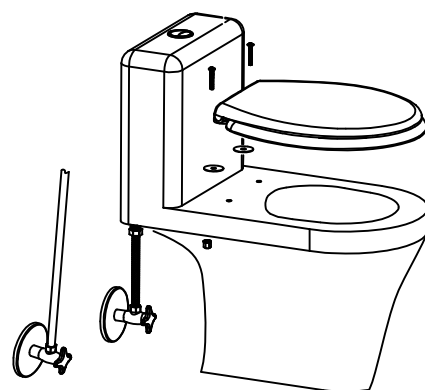


Remove the existing seat cover and keep all the parts

3

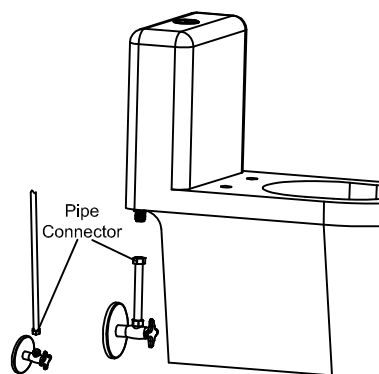


a. Without flexible pipe:
unscrew the pipe connector
b. With flexible pipe:
take off the water supply pipe
and then place the flexible pipe
instead

4

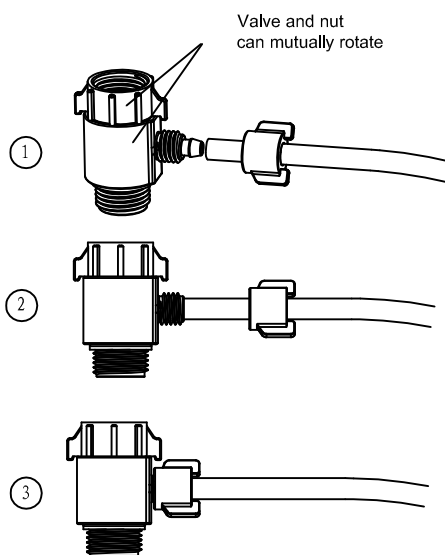


Connect the hosepipe
to the adaptor

5

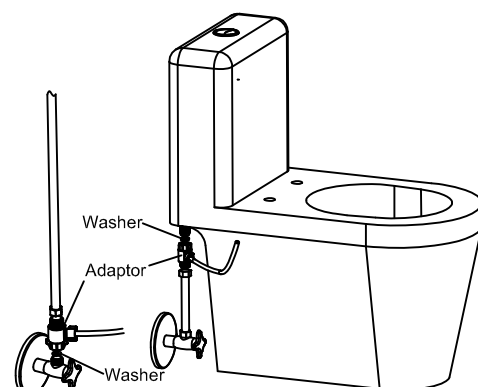


Connect the adaptor
to the water supply pipe

6

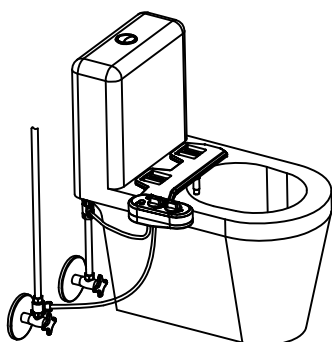


Connect hot water tube to hot
water inlet of the bidet, and
connect cold water tube to cold
water inlet of the bidet

7

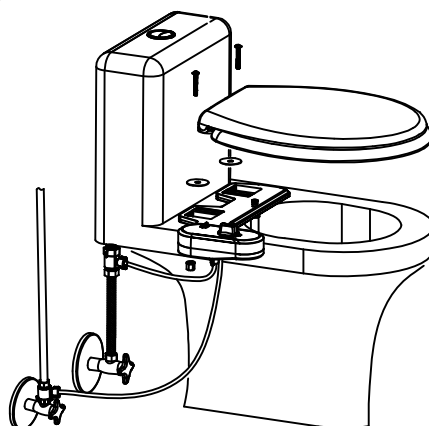

Replace the existing
seat cover to the stool

8

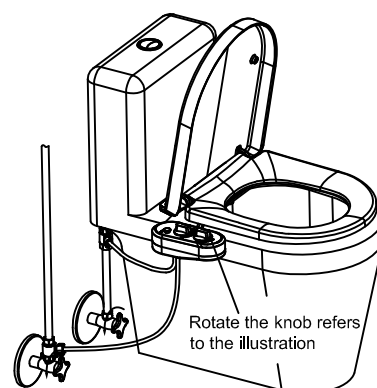

Adjust the knob as illustrated,
turn on the angle valve and then
check if there is any seepage
and leakage for each joint

Specification

Model	MT101
Voltage	Non-electric
Water Supply Mode	Connect to the hot water supply pipe and cold water supply pipe directly
Angle of Nozzle	Adjustable
Water Temperature for self-cleaning	Cold and hot water
Self-cleaning	YES
Water Temperature	3°~ 35°
Room Temperature	3°~ 40°
Water Pressure	0.05 MPa ~0.6 MPa
Distance between Holes Axis	138 ~ 202 mm
Item Size	430x245x103mm

Trouble shooting

Issues	Measures
The spray nozzle has no water	1.The water supply is cut off 2.The angle valve is closed 3.The spray nozzle is clogged 4. Low water pressure 5. Water supply pipe is bended
Low water pressure	1. The water flow control knob is adjusted to be low position 2. Water supply pipe is bended
The water is not hot enough	1.The temperature control knob is adjusted to cold water range 2.The temperature of hot water source is too low 3.The angle valve for hot water is closed