



BOX052RX

MONTÁŽNÍ POSTUP • MONTÁŽNY POSTUP • INSTALLATION MANUAL • PROCEDURA MONTAŻU • MANUAL DE INSTALARE • SZERELÉSI ÚTMUTATÓ • ИНСТРУКЦИЯ ПО УСТАНОВКЕ • ИНСТРУКЦИЯ ЗА МОНТАЖ

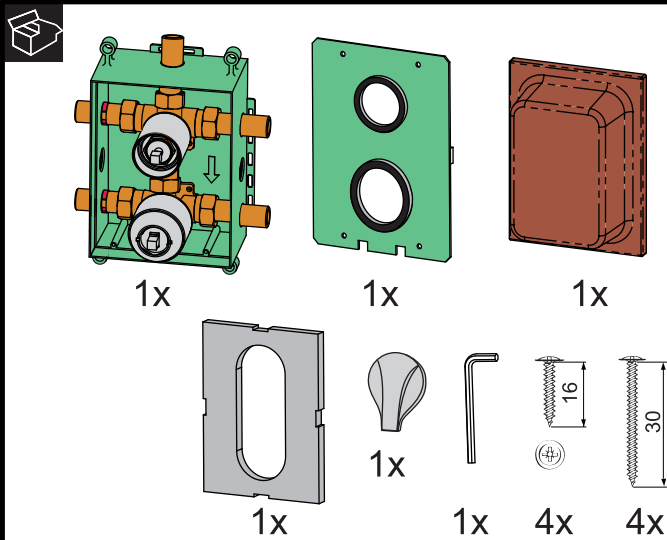


1x 1x 1x 1x 1x 1x 4x 4x

1

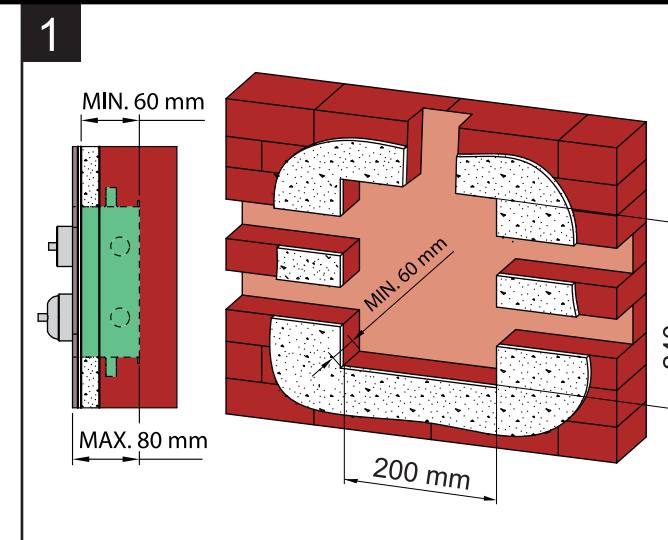


MIN. 60 mm MAX. 80 mm 200 mm 240 mm

2

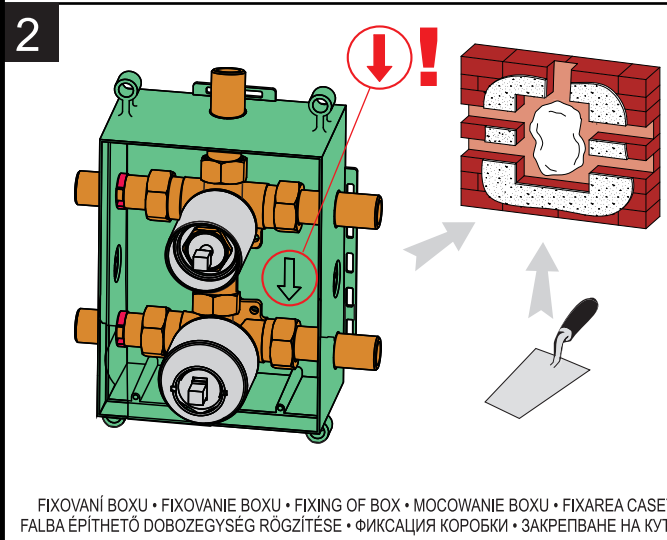


FIXOVÁNÍ BOXU • FIXOVANIE BOXU • FIXING OF BOX • MOCOWANIE BOXU • FIXAREA CASETEI
FALBA ÉPÍTÉSHŐ DOBOZEGYSÉG RÖGZÍTÉSE • ФИКСАЦИЯ КОРОБКИ • ЗАКРЕПВАНЕ НА КУТИЯТА

3

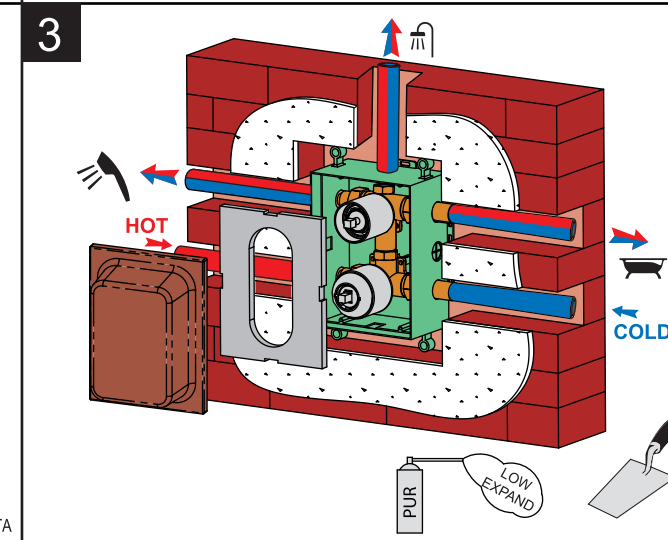


PUR LOW EXPAND

4

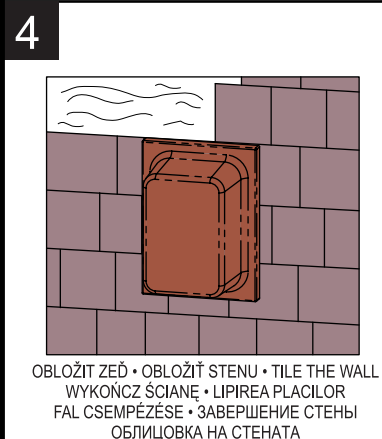


OBLOŽIT ZEĎ • OBLOŽIŤ STENU • TILE THE WALL
WYKOŃCZ ŚCIANĘ • LIPIREA PLACILOR
FAL CSEMPÉZÉSE • ЗАВЕРШЕНИЕ СТЕНЫ
ОБЛИЦОВКА НА СТЕНАТА

5

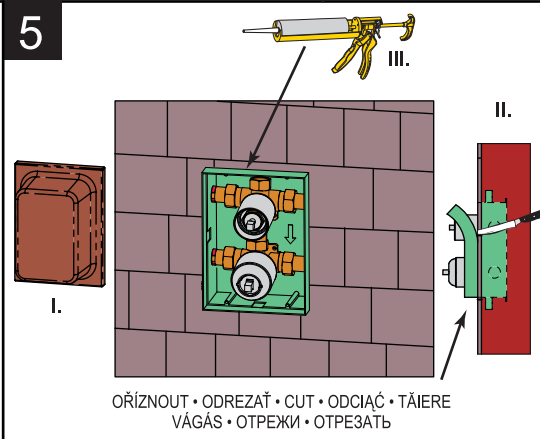


I. OŘÍZNOUT • ODREZAŤ • CUT • ODCIAĆ • TĂIERE
VÁGÁS • ОТРЕЖИ • ОТРЕЗАТЬ

6

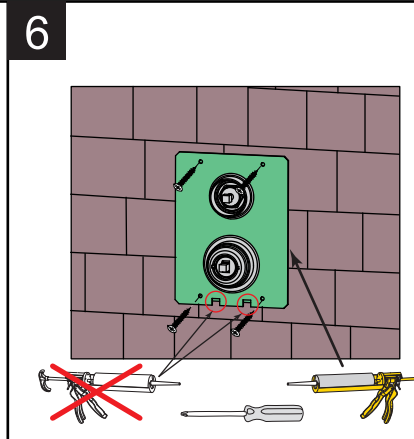


7

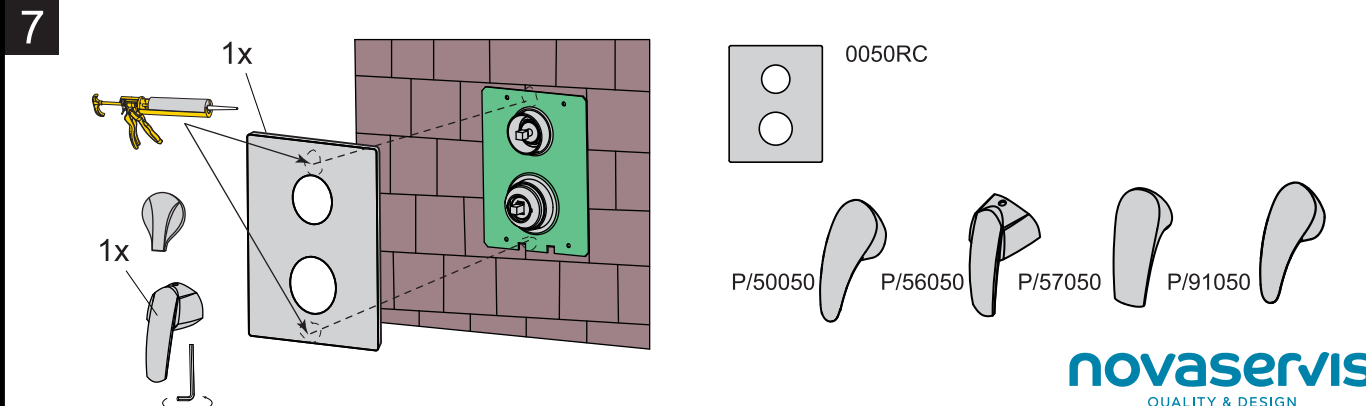


1x 1x 0050RC P/50050 P/56050 P/57050 P/91050

novaservis
QUALITY & DESIGN

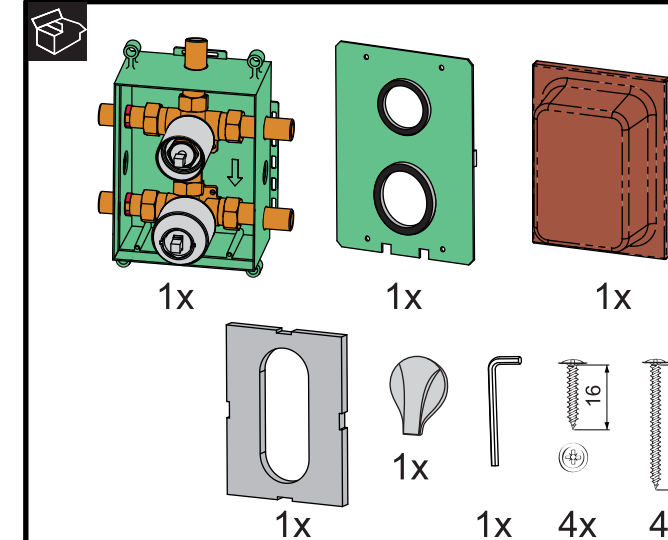


1x 1x 1x 1x 1x 1x 4x 4x

1

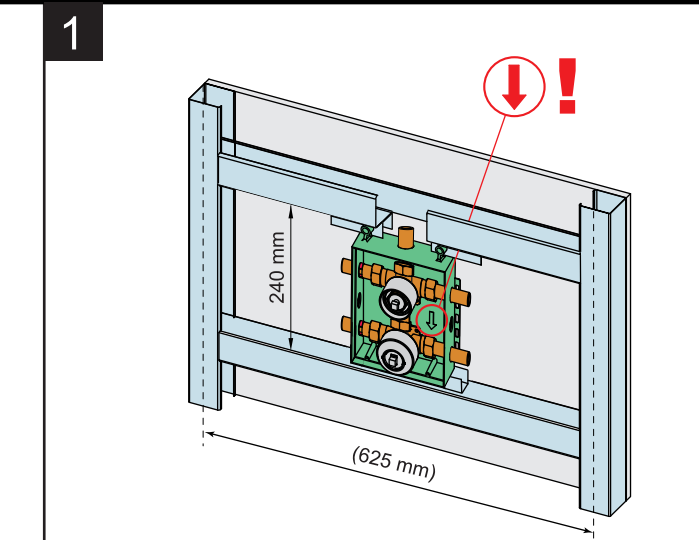


240 mm (625 mm)

2

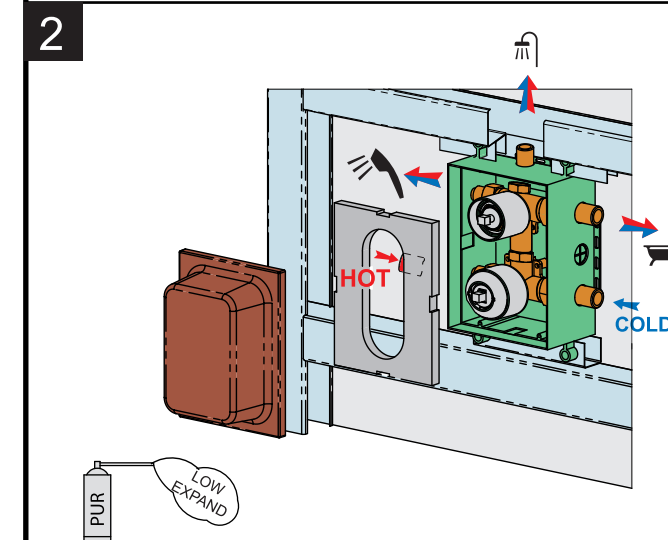


PUR LOW EXPAND

3

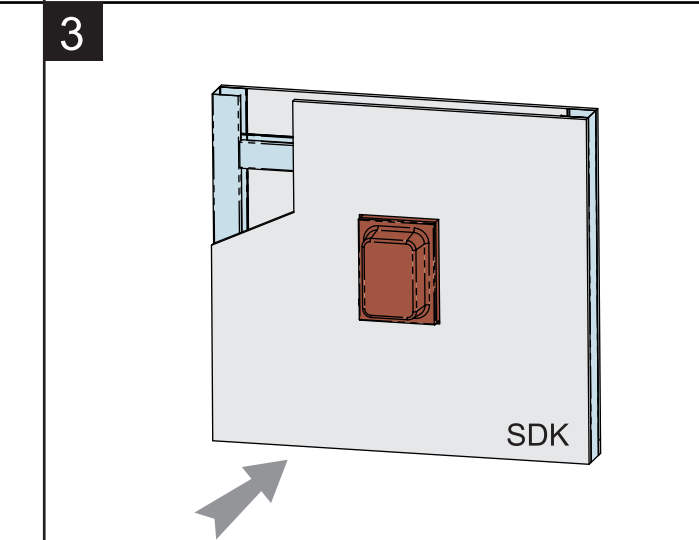


SDK

4

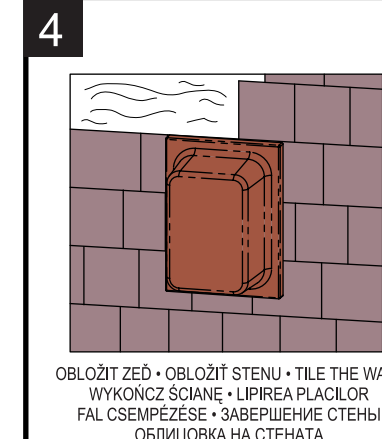


OBLOŽIT ZEĎ • OBLOŽIŤ STENU • TILE THE WALL
WYKOŃCZ ŚCIANĘ • LIPIREA PLACILOR
FAL CSEMPÉZÉSE • ЗАВЕРШЕНИЕ СТЕНЫ
ОБЛИЦОВКА НА СТЕНАТА

5

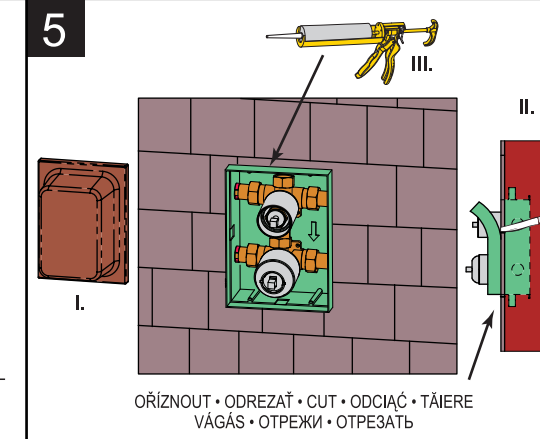


I. OŘÍZNOUT • ODREZAŤ • CUT • ODCIAĆ • TĂIERE
VÁGÁS • ОТРЕЖИ • ОТРЕЗАТЬ

6

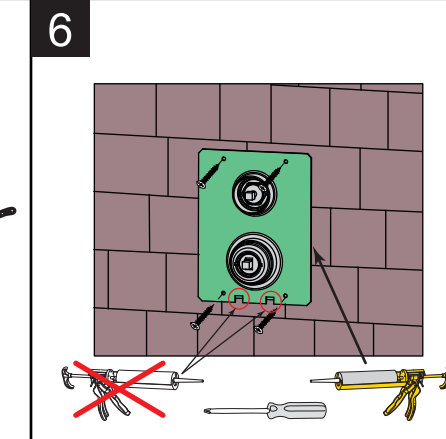

7

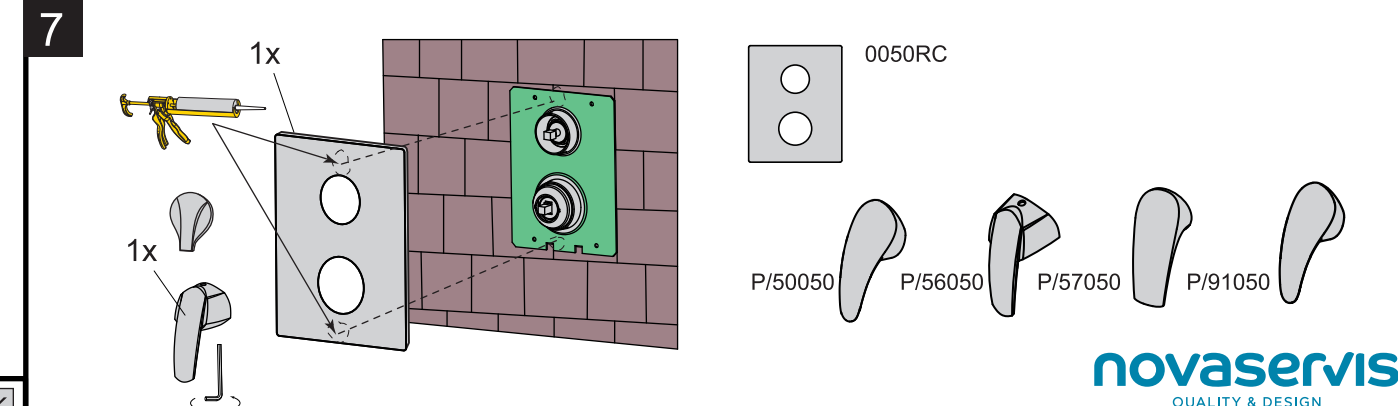

1x 1x 0050RC P/50050 P/56050 P/57050 P/91050

novaservis
QUALITY & DESIGN