


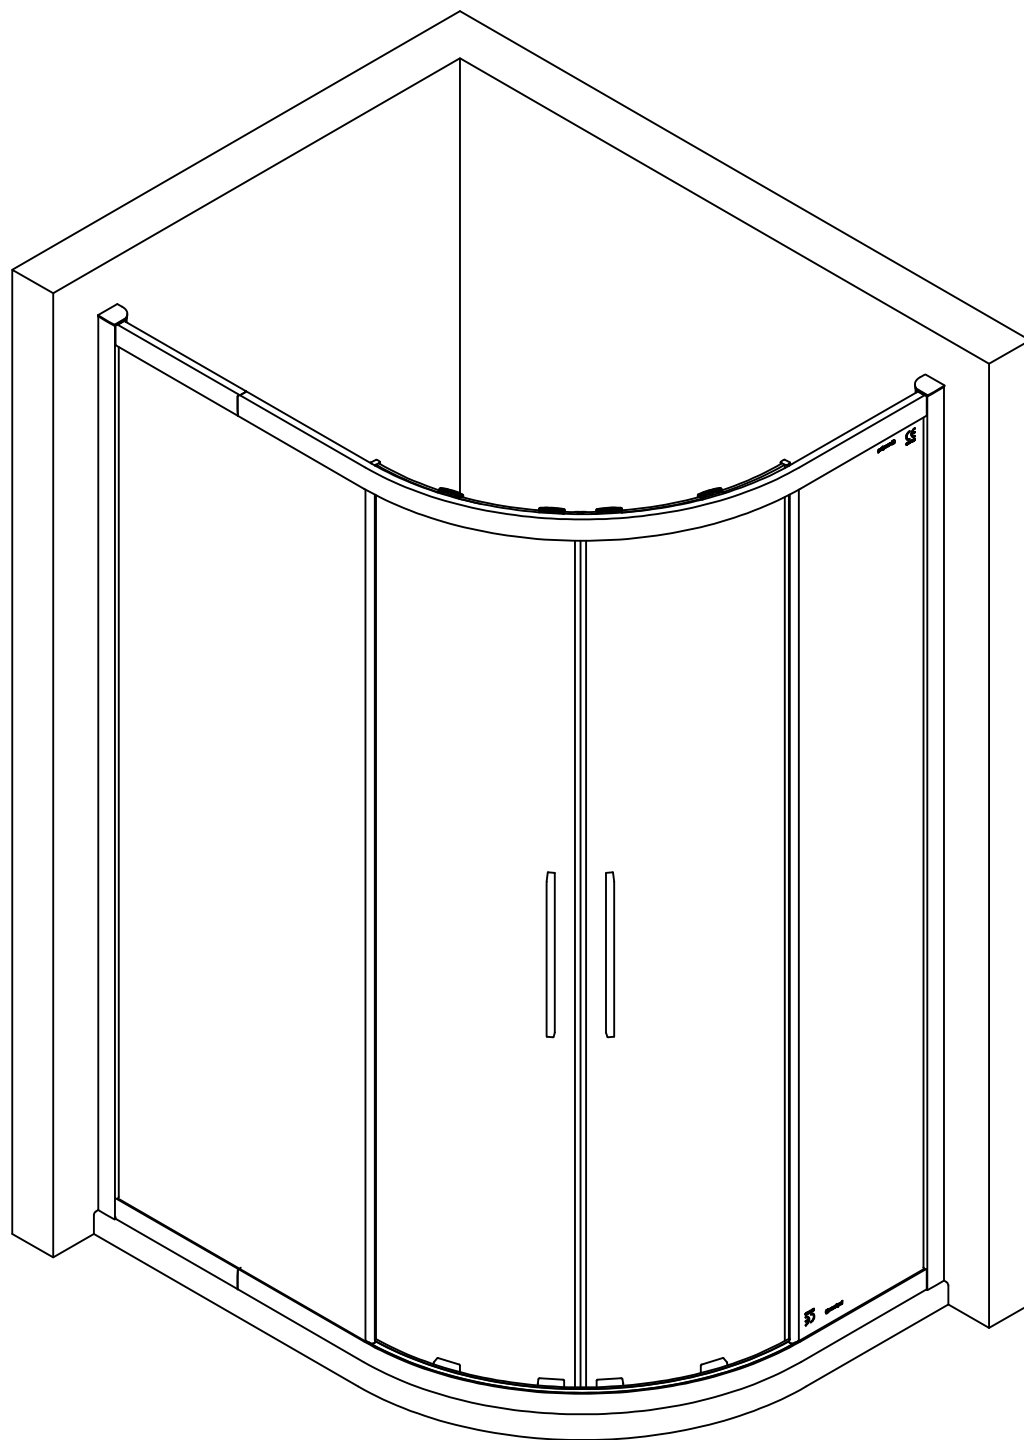

DL5015L

Installation instructions
Montážní návod
Installationsanweisungen
les instructions d'installation

polysan

Nesměřice 52
285 22 Zruč nad Sázavou
Česká republika

tel.: +420 327 585 981
fax: +420 327 585 989

www.polysan.net

Exploded view diagram of a curved shower door assembly. The diagram shows the following components and their quantities:

- 1: 6Pcs
- 2: ST4X30, 14Pcs
- 3: 2Pcs
- 4: 2Pcs
- 5: 2Sets
- 6: 2Sets
- 7: 2Pcs
- 8: 2Pcs
- 9: 2Sets
- 10: ST4X12, 6Pcs
- 11: 2Pcs
- 12: 8#, 1pc

TOOLS:


- Hand saw
- Drill
- Level
- Screwdriver
- Measuring tape
- Marker
- Hammer

1

Three-step assembly sequence for the curved shower door:

- Step 1:** Shows the initial assembly of the curved frame. A curved panel (9) is being attached to the side rails (5) using screws (2). An "AntiDrop" icon indicates a feature to prevent the door from falling.
- Step 2:** Shows the door being mounted to the wall. The door is being secured with screws (2) into the wall. A detail view shows the use of a drill (I) to create a hole (Ø6) and a screw (1) to secure the door. A detail view shows the use of a screwdriver (II) to tighten a screw (ST4X30) into the door frame.
- Step 3:** Shows the final assembly of the door, including the installation of the bottom rail (12) and the final adjustment of the door.

2

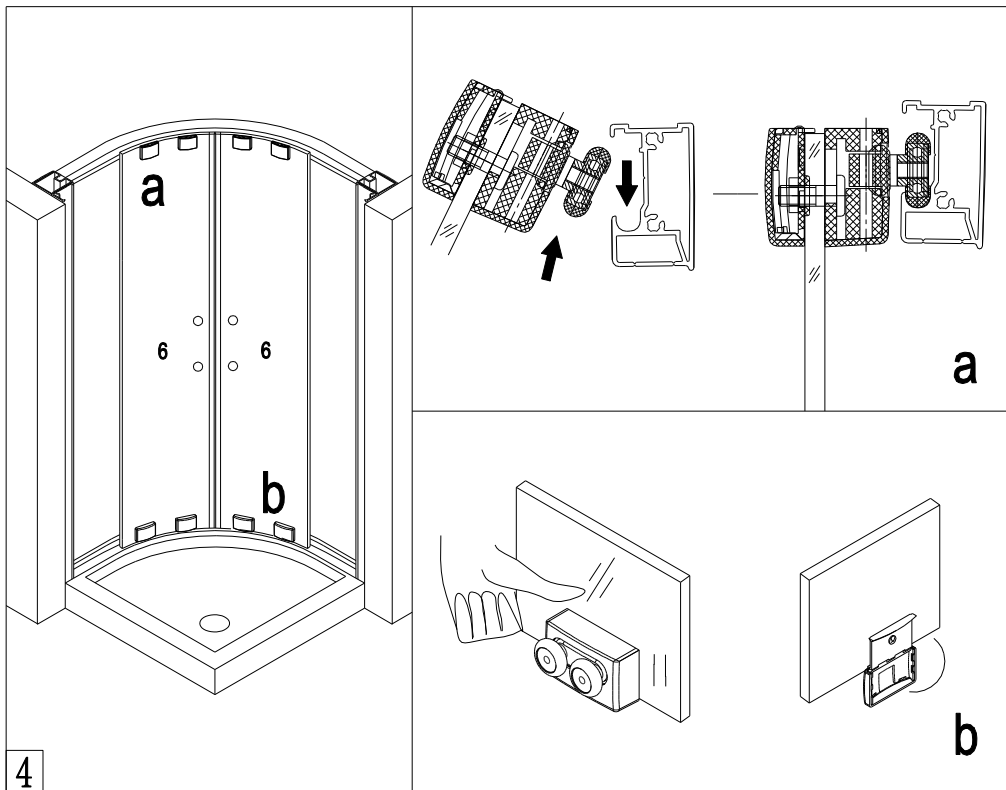

The proper operation and tightness can be done by setting the position of the door.

Bezvadný chod a těsnost docílíte správným nastavením polohy dveří.

Die fehlerlose Funktion und entsprechende Dichtigkeit erreichen Sie durch richtige Einstellung der Position der Tür.

Le bon fonctionnement et les fuites peuvent être fait en mettant la position de la porte droite.

