


(D) UNBEDINGT BEACHTEN:
Griff-Montage **vor** Wanneneinbau.


(F) IMPORTANT:
Montage de poignées **avant**
l'installation de la baignoire.

(GB) VERY IMPORTANT:
fitting of handles should be performed
prior to bath-tub installation.


(I) DA OSSERVARE ASSOLUTAMENTE:
montare la maniglia **prima** di installare la
vasca da bagno.

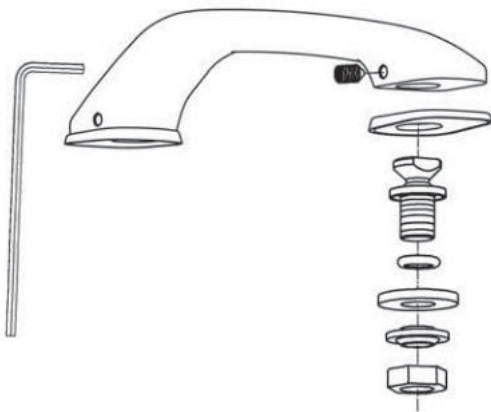


1

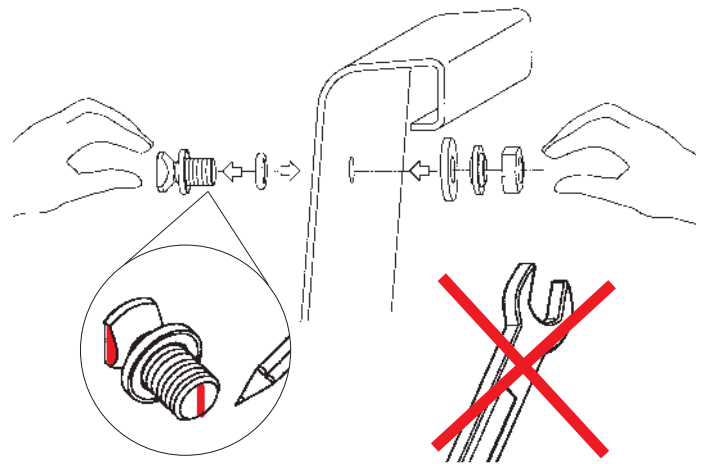

2

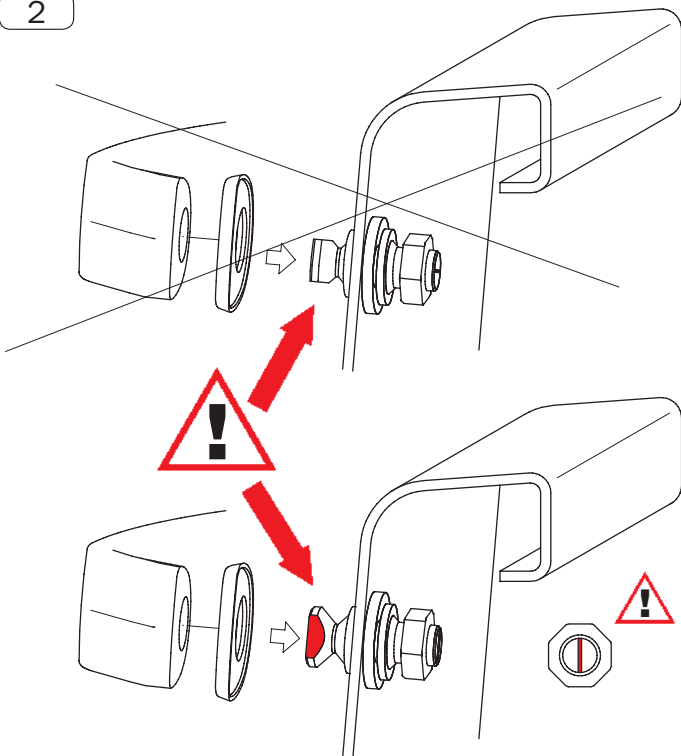

3

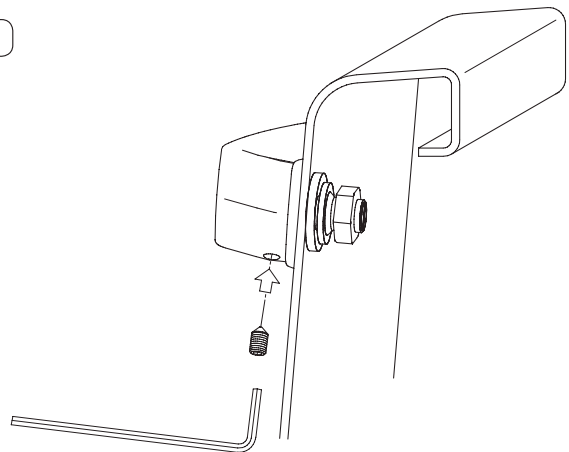

4

